


Alfa Romeo

QUICK
START
GUIDE

Giulia



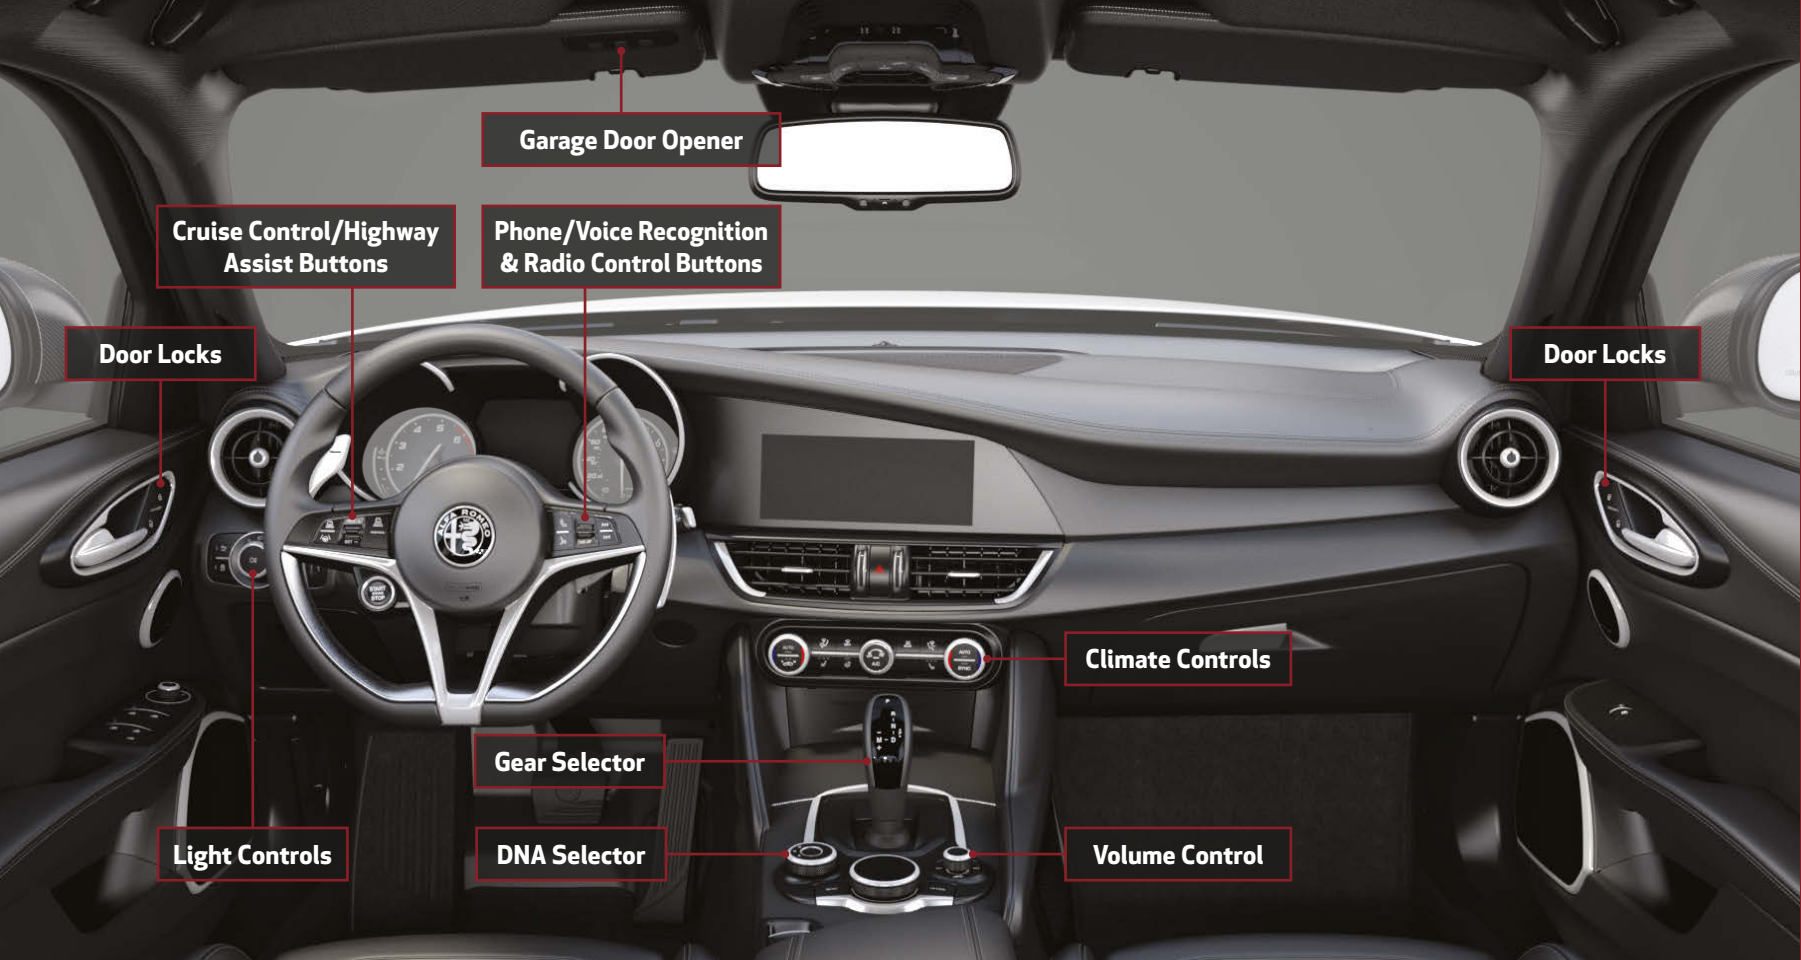

Garage Door Opener

Cruise Control/Highway Assist Buttons

Phone/Voice Recognition & Radio Control Buttons

Door Locks

Door Locks

Light Controls

Gear Selector

DNA Selector

Climate Controls

Volume Control

Garage Door Opener



1 While the car is ON, hold the handheld garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle.

2 Push and hold both the HomeLink® button being programmed and the button on the garage door transmitter.

TO ERASE ALL SET CHANNELS:

Push and hold the two outside HomeLink® buttons for 20 seconds until the orange indicator flashes. An individual channel cannot be erased.



ROLLING OR NON-ROLLING?

Check your garage door opener motor in your garage for a “LEARN” or “TRAIN” button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

3

For Non-Rolling Code garage door openers, watch for the indicator light to go constant.

For Rolling Code garage door openers, watch for the indicator light to go from a slow blink to blinking rapidly.

4

For Rolling Code garage door openers only, firmly push and release the “LEARN” or “TRAIN” button on your garage door opener motor in your garage, then push the HomeLink® button in your vehicle for two long presses.

5

If the programming was successful, your garage door should open and close with your chosen HomeLink® button.

Scan For
HomeLink® Video



NEED ASSISTANCE?

1-800-355-3515

Pair a Phone



1 Make sure Bluetooth® is enabled on your mobile device

2 With the vehicle in the ACC or ON/RUN position, select the Settings tab and then "Infotainment"

3 Press "Bluetooth®"

4 Select "Add Device", then follow the prompts on your phone and on the touchscreen

CONNECT YOUR APPS

Connect your smartphone to the media USB port.

The Android Auto™ or Apple CarPlay® icon will launch on the touchscreen.

KEEP IN MIND:




For Android™ Users, if the Android Auto™ app was not previously downloaded, it will download the first time you plug in your device.



For Apple® Users, Apple CarPlay® is only compatible with iPhone® 5 or later and requires Siri being enabled in "Settings".

Ready to remove a phone or audio device?

- 1** Press the Settings tab.
- 2** Press "Infotainment" and then "Bluetooth®".
- 3** Select the desired Bluetooth® device.
- 4** Press "Remove Device". The device will be removed.

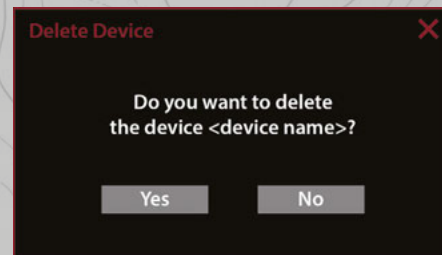

Connected Services

WITH CONNECTED SERVICES YOU CAN...



Lock Your Vehicle



Unlock Your Vehicle



Remote Start Your Vehicle




Cancel Remote Start



Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES

Press the Assist button on the touchscreen to directly speak with an agent who will begin setting up your Alfa Connect account.

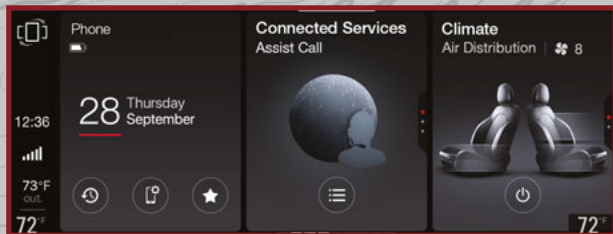

Alfa Connect

REAP THE BENEFITS OF YOUR OWNER'S PROFILE TODAY!

Get 24/7 Access To Everything You Need

- Custom vehicle dashboard
- Access to your vehicle's Owner's Information
- Schedule dealership service with ease
- Obtain special offers on Alfa service
- View maintenance records
- Mobile vehicle commands



Registering an account can be done through the vehicle's touchscreen! Follow the prompts to speak with an agent who will assist you with activating the feature.


*For Canadian customers, be sure to select the country and language prior to signing into Alfa Connect.

Scan For Owner's Profile Website



Scan me
(U.S. Residents Only)*

Lights & Wipers Operation

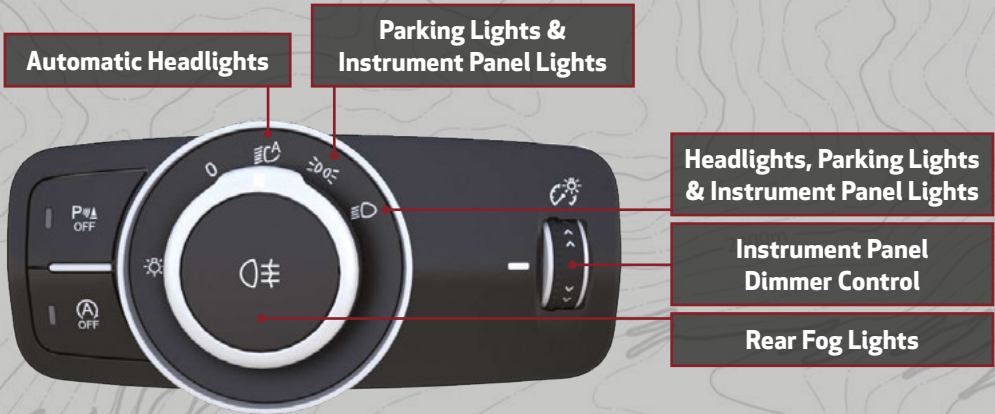

Automatic Headlights

Parking Lights & Instrument Panel Lights

Headlights, Parking Lights & Instrument Panel Lights

Instrument Panel Dimmer Control

Rear Fog Lights

PUSH

TO ACTIVATE HIGH BEAMS

PULL

FOR FLASH-TO-PASS



TIP:

After selecting a wiper sensitivity, a quick upward tap of the lever activates the windshield wipers.

PUSH UP

TO MIST THE WINDSHIELD

PULL




 
 
TO ACTIVATE THE FRONT WINDSHIELD WASHER

ROTATE

THE SWITCH TO SELECT A SENSITIVITY




FRONT WIPERS

-  HIGH
-  LOW
-  RAIN SENSING HIGH
-  RAIN SENSING LOW
-  OFF

Scan For Wipers Video



Climate Controls

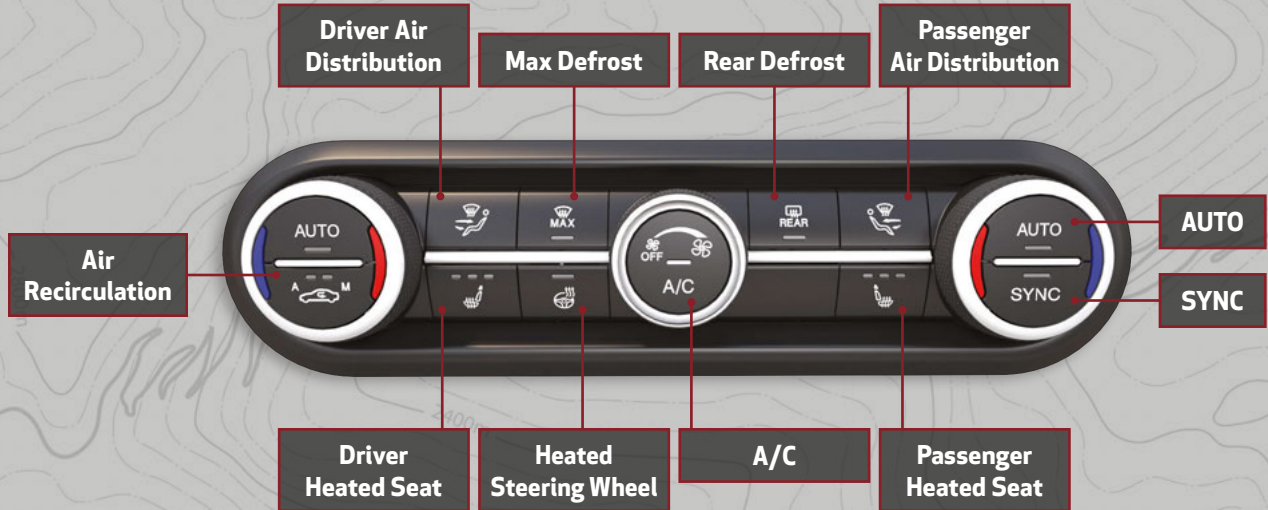

Scan For Climate Video




The **Driver Temperature knob** will control the temperature on the driver's side of the vehicle.



The **Recirculation button** will toggle between recirculation mode and outside air mode.

The **Blower Control knob** will regulate the amount of air forced through the system in any mode.

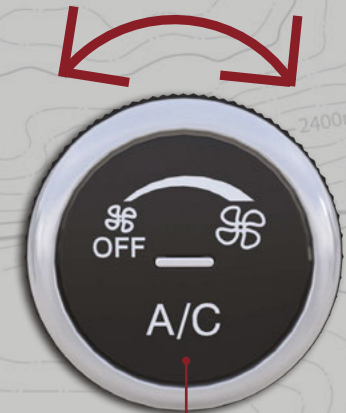

The **A/C button** will engage the Air Conditioning (A/C) system.

The **Passenger Temperature knob** will control the temperature on the passenger's side of the vehicle.



The **SYNC button** will sync the passenger side temperature with the driver side temperature.

Alfa DNA System

CHOOSE THE MODE THAT FITS YOUR DRIVING STYLE AND ROAD CONDITIONS:



RACE

Track Race Driving Mode

Yellow theme in the instrument cluster display (Quadrifoglio Only)

Dynamic

Sports Driving Mode

Red theme in the instrument cluster display

Natural

Natural Driving Mode

Blue theme in the instrument cluster display


Advanced Efficiency

ECO Driving Mode for max fuel savings

Green theme in the instrument cluster display

Information And Entertainment System

Control your Alfa's Information And Entertainment System through the controls on the center console or through the touchscreen radio.

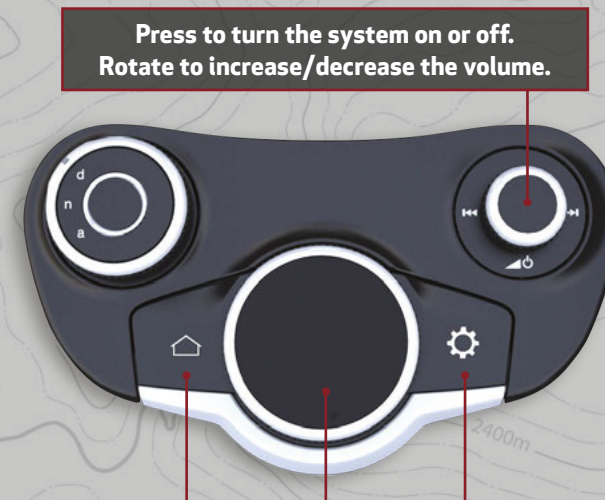


Press to turn the system on or off.
Rotate to increase/decrease the volume.

Press to access the main menu.

Press to access the settings menu.

Rotate to scroll through menus and widgets.
Press to select any options.

Touchscreen Widgets

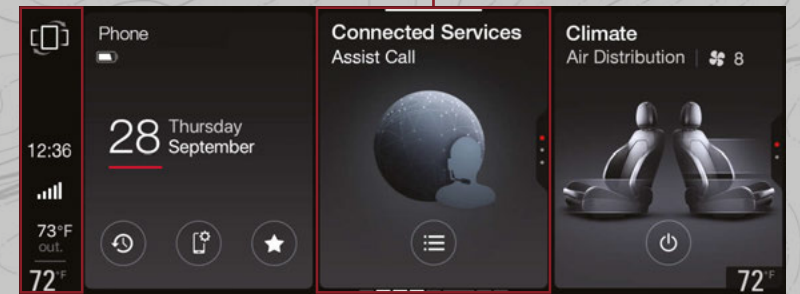


















































 

 

 

















 






Status Bar

Touchscreen Buttons

Swipe left or right on the touchscreen to scroll through the available menus and widgets.

Warning & Indicator Lights

| | | | | | | | | | | | |
|---|---|---|---|---|---|---|--|---|---|---|--|
|  | Air Bag |  | Alfa Steering Torque (AST) Failure |  | Alternator Failure |  | Automatic Transmission Failure |  | Brake |  | Brake Disc Temperature |
|  | Door Open |  | Driver Attention Assist (DAA) System Activation |  | Electronic Brake Force Distribution (EBD) Failure |  | Electronic Throttle Control (ETC) |  | Engine Coolant Temperature Too High |  | Hood Cap Not Properly Shut |
|  | Insufficient Engine Oil Level |  | Low Engine Oil Pressure |  | Oil Temperature |  | Power Steering Failure |  | Seat Belt Reminder |  | Trunk Lid Not Properly Shut |
|  | Anti-Lock Brake System (ABS) Activation |  | Adaptive Front Lighting System Failure |  | All-Wheel Drive Failure |  | Anti-Lock Brake System (ABS) |  | Audio System Failure |  | Automatic High Beam Headlights Failure |
|  | Automatic Transmission Fluid Overheating |  | Blind Spot Monitoring (BSM) System Failure |  | Driver Attention Assist (DAA) System Failure |  | Dusk Sensor Failure |  | Dynamic Drive Control System Failure |  | Electric Park Brake Failure |
|  | Electronic Stability Control (ESC) |  | Electronic Stability Control (ESC) OFF |  | Engine Check/Malfunction |  | Engine Immobilizer Failure/Break-In Attempt |  | Engine Oil Change Required |  | Engine Oil Level Sensor Failure |
|  | Engine Oil Pressure Sensor Failure |  | Exterior Lights Failure |  | Forward Collision Warning (FCW) |  | Forward Collision Warning (FCW) System Failure |  | Fuel Cut-Off |  | Fuel Cut-Off System Failure |
|  | Fuel Level Sensor Failure |  | Fuel Reserve/Limited Range |  | Generic Indication |  | Highway Assist/Traffic Jam Assist System Failure |  | Ice Risk |  | Keyless System Failure |
|  | Lane Departure Warning (LDW) System Failure |  | Loose Fuel Filler Cap |  | Low Coolant Level |  | Park Sensors System Failure |  | Power Trunk Fault |  | Rain Sensor Failure |
|  | Rear Fog Lights |  | Service Adaptive Cruise Control (ACC) System |  | Shock Absorbers Failure |  | Soft Suspension Calibration Insertion |  | Speed Limiter System Failure |  | Stop/Start System Failure |
|  | Temporary All-Wheel Drive Failure |  | Tire Pressure Low |  | Tire Pressure Monitoring System (TPMS) |  | Wear On Brake Pads |  | Wear On Carbon Ceramic Material (CCM) Brake Discs |  | Windshield Washer Liquid Level |
|  | Windshield Wiper Failure |  | Adaptive Cruise Control (ACC) |  | Automatic Headlights |  | Automatic High Beam |  | Cruise Control Activated |  | Headlights |
|  | Left Turn Signal |  | Parking/Headlights On |  | Right Turn Signal |  | Stop/Start |  | Automatic High Beam Headlights |  | High Beam Headlights |

For additional information on any of the topics in this publication, please refer to your Owner's Manual.