



A) Stereos with 6 DISC buttons:

1

2

3

4

5

6

The PhatBox uses the 6 DISC buttons as "mode" buttons. Songs are always arranged according to the currently selected browser mode.

In the Browser Modes:

2

3

4

5

Playlist

Album

Artist

Genre



= Advance to the next **Selection** in a **Mode**.
(Modes explained on opposite side of card)

In Track Mode:

1

Track



= Advance to the next **Track** in a **Selection**.



Any Mode



+5 Seconds



Track Mode

After 5 seconds of song play, the mode will automatically change back to "Track Mode", allowing you to scroll through the tracks that are contained in the Browser Mode you have selected.

B) Stereos with 2 button DISC controls:

DISC -

DISC +

or

CD -

CD +

or

◀ TUNE ▶

DISC -

DISC +

DISC buttons advance through 5 **Modes** (Modes are explained on opposite side of card).

Directly after selecting a **Mode**, pushing



TRACK FORWARD or SEEK FORWARD will advance to the next **Selection** in that **Mode**.

After 5 seconds of song play, the **Mode** will change to Track



Mode. Pushing TRACK FORWARD or SEEK FORWARD will advance to the next **Track** in a **Selection**.

Modes

Playlist Mode

2

Playlists are listed in the order placed on the DMS.

 or   = Next playlist title announced.

  or holding   = Fast Forward through Playlists.

Album Mode

3

Albums grouped by Artist.
Artists listed alphabetically.

 or   = Album name announced (grouped by Artist).

  or holding   = Artist names (groups) announced alphabetically.

Artist Mode

4

Artists listed alphabetically.

 or   = Artists names are announced alphabetically.

  or holding   = First letter of the Artist's name announced.

Genre Mode

5

Genres listed alphabetically.

 or   = Genre names are announced alphabetically.

  or holding   = First letter of the Genre name announced.

Features Mode

6

 or   = Features are announced.

  or  = Selects announced feature.