



Parts Included:

- A) Defenders of Speed A2A-IC
- B) 4X 6mm Fender Washers
- C) 1" X 1" X 33" Self Adhesive Foam Strip



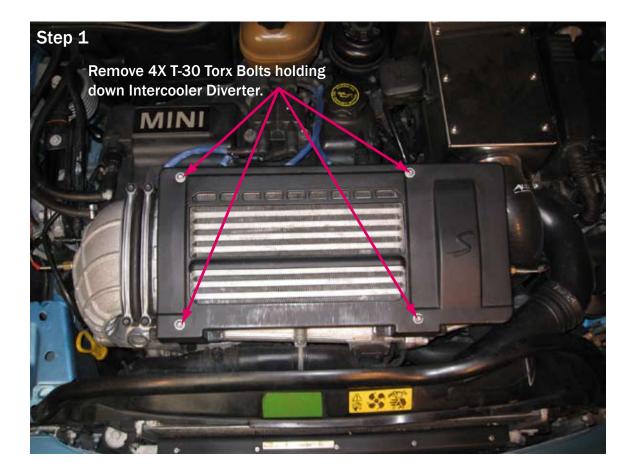

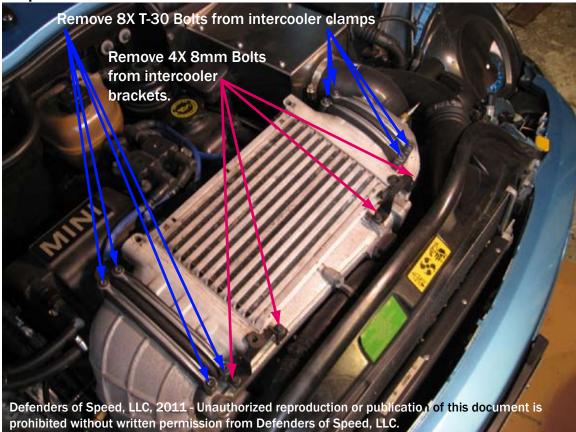



Pull upward on supercharger side of intercooler with both hands to release it from the intercooler bellows. – Pull the intercooler free of the bellows. – Remove the OEM bellows at this time if you are upgrading the intercooler bellows to aftermarket silicone parts.

Defenders of Speed, LLC, 2011 - Unauthorized reproduction or publication of this document is prohibited without written permission from Defenders of Speed, LLC.



Re-Install OEM bellows or install silicone intercooler boots. - Slide DoS A2A-IC (IC). into outlet side intercooler boot. - Work the IC into supercharger (SC) side intercooler boot by tilting SC side boot slightly upward and then pushing both parts downward onto the SC side IC horn. If this does not work, a nonmarring nylon pry tool may help to ease the IC into the boot.


0

Step 6


*** !!! DO NOT USE ANY METAL PRY TOOLS OR HOSE HOOKS FOR THIS STEP TO AVOID DAMAGING THE PLASTIC ENDTANKS!!!

Defenders of Speed, LLC, 2011 - Unauthorized reproduction or publication of this document is prohibited without written permission from Defenders of Speed, LLC.



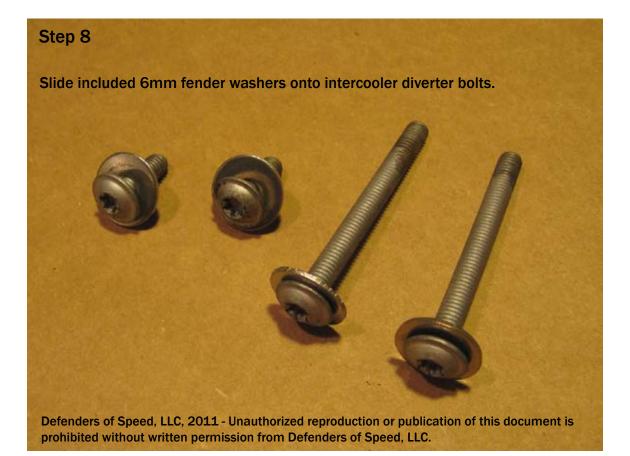




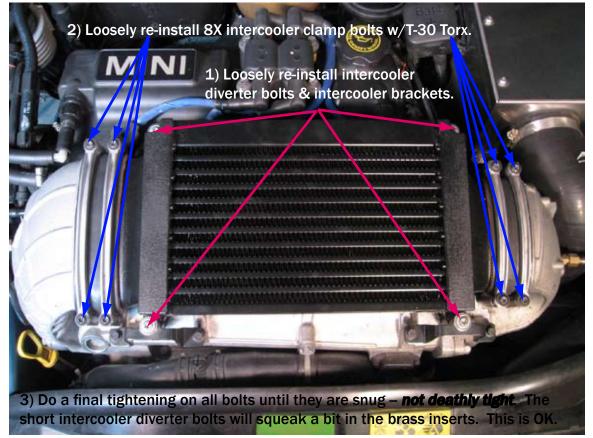

Remove duct and sealing plate from bonnet using an 8mm socket and a philips head screwdriver. – Remove existing foam strip from sealing plate using a non-marring _____ nylon scraper and a plastic safe cleaner.*



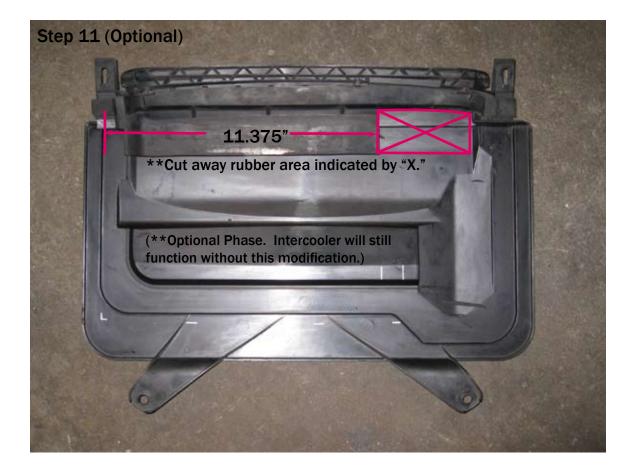

Remove backing and affix foam seal as shown. The adhesive used on the foam strip is VERY aggressive, so make sure that you are very careful during this step.





Final installation should look like this when completed.



At this point, double-check all connections/connectors, fasteners, clamps before starting the engine.

NOTES:

1) Check all fittings, fasteners, vacuum lines and electrical connectors near the location of the intercooler to ensure that they are in their proper locations and/ snuggeddown – **not deathly tight** before starting the engine. Overtightening fasteners could crack the intercooler or break the intercooler clamps.

3) Call us at (404) 433-2452 or send Clint an e-mail at clint@defendersofspeed.com if you have any questions or need installation assistance.

Enjoy your new high performance, race ready Copper Air-to-Air Intercooler!

-DoS