


REMOVAL AND INSTALLATION

REMOVAL

1. Manually push the inside (1a) of the rear view mirror cover (1b), releasing it from its internal retainers (1c) and the various alignment tabs (1d).
2. Remove the cover (1b).

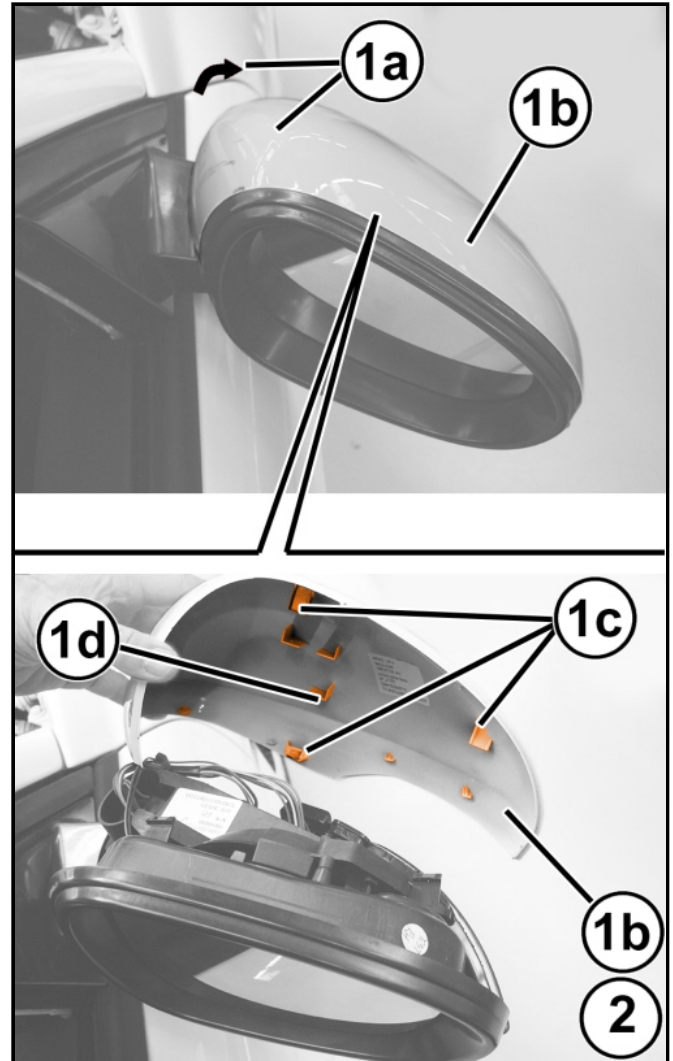

INSTALLATION

1. Position the cover (1a) and engage the alignment tabs (1b) and internal retainers (1c).

