


2014 WK NAFTA - Engine, 3.0L Turbo Diesel/Lubrication/FILTER, Engine Oil/Removal Filter


Filter p/n: 68229402AA (formerly 68109834AA)

1. Remove the oil filter cap (1).
2. While holding the oil filter cover (1), pushdown on base oil filter (4) to separate from cover and remove the oil filter (3).
3. Remove and discard O-ring gasket (2). Clean and inspect cap.
4. Using a suitable suction tool, remove the residual oil from oil filter housing.

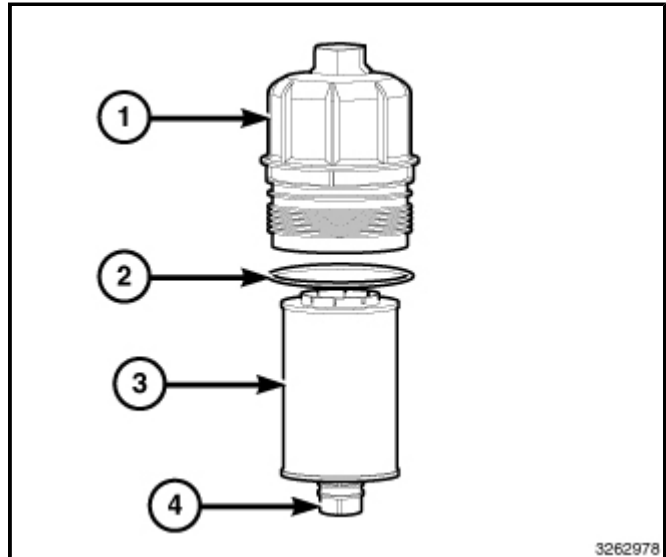

2014 WK NAFTA - Engine, 3.0L Turbo Diesel/Lubrication/FILTER, Engine Oil/Installation

1. Using a suitable suction tool, remove any residual oil from oil filter housing.
2. Lubricate and install the new oil filter cap O-ring gasket (2). Make sure the oil filter cap O-ring is in the correct location.
3. Install the oil filter (3) into oil filter cap (1).
4. Install oil filter cap (1) and tighten to 25 N·m (18 ft. lbs.).

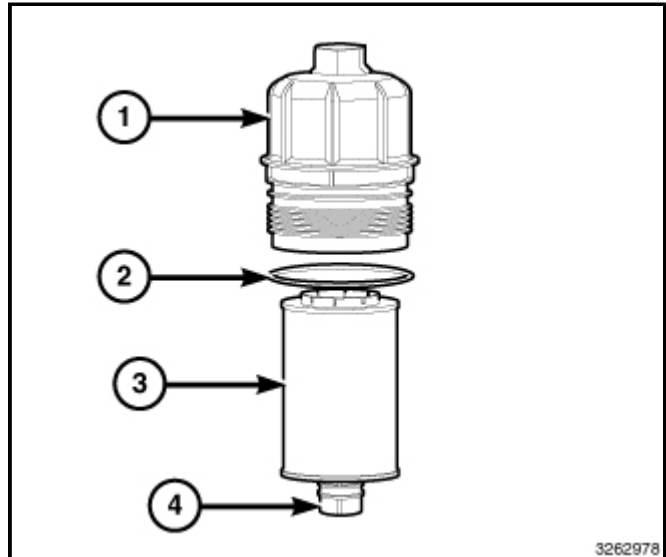



NUMBER: 09-004-13

GROUP: Engine

DATE: November 22, 2013

This bulletin is supplied as technical information only and is not an authorization for repair. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise, without written permission of Chrysler Group LLC.

SUBJECT:

Engine Oil Filter Service

OVERVIEW:

This bulletin provides information regarding oil filter element service.

MODELS:

2014

WK

Grand Cherokee SFU

NOTE: This bulletin applies to vehicles equipped with the 3.0L Diesel Engine (Sales Codes EXF).

NOTE: This Bulletin does not apply to Ram 1500 Pickups equipped with the 3.0L Diesel Engine (Sales Codes EXF). These vehicles incorporate an oil drain back system.

DISCUSSION:

It may take 30 minutes or longer for the engine oil in the oil filter housing to completely drain back into the engine. The oil will only drain back into the engine through the oil pump gears. When servicing the oil filter, please perform the following procedure to help ensure that the residual oil in the housing does not spill from the housing when the new filter is installed.

REPAIR PROCEDURE:

1. Install a shop rag around the oil filter housing ([Fig. 1](#)) to capture any oil spills that may occur.

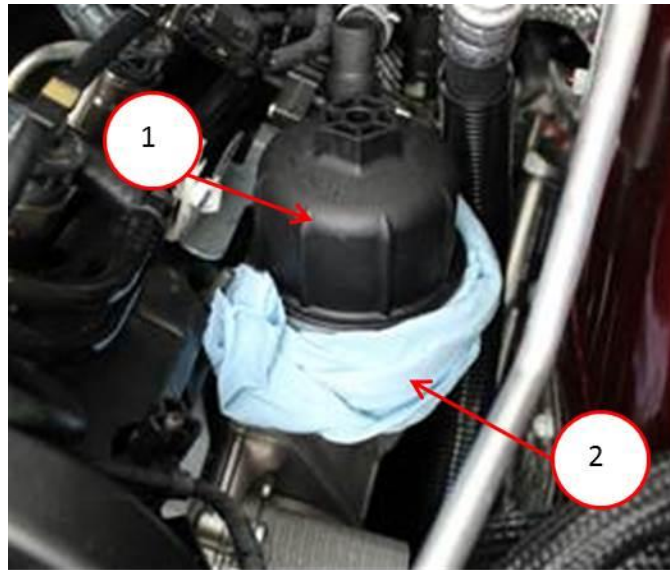


Fig. 1 Oil Filter Housing

- 1 - Engine Oil Filter Housing Cover
 - 2 - Shop Rag
-

- 2. Remove the oil filter cap.
- 3. To separate the filter from the cover, hold the oil filter cover and push down on the base of the oil filter to separate it from the cover. Then, remove the oil filter (Fig. 2).



Fig. 2 Oil Filter Removal

- 1 - Engine Oil Filter
-

4. Remove and discard O-ring gasket. Clean and inspect cap.
5. Using a suitable suction tool ([Fig. 3](#)), remove any residual oil from oil filter housing.

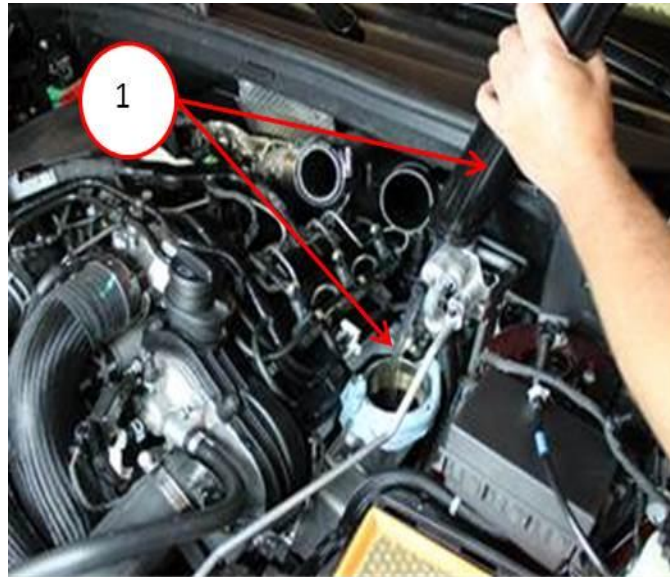


Fig. 3 Removing Oil From Housing

1 - Suction Gun

6. Lubricate and install the new oil filter cap O-ring gasket ([Fig. 4](#)). Make sure the oil filter cap O-ring is in the correct location.

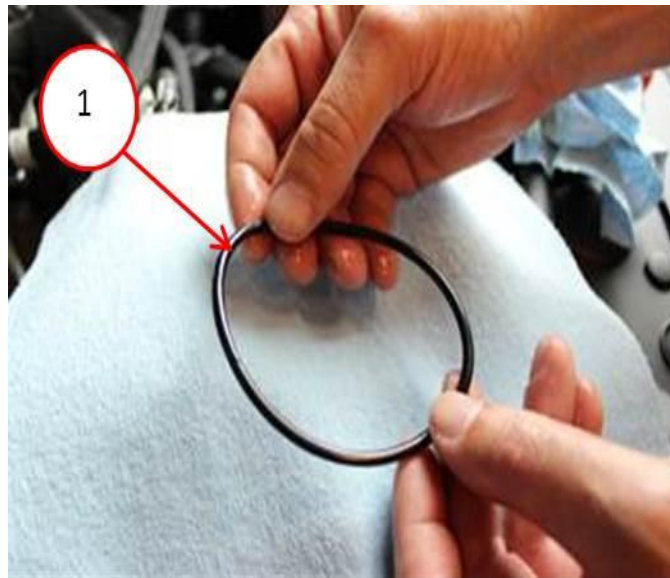


Fig. 4 Lube O-Ring

1 - O-Ring

7. Install the new oil filter into oil filter cap.
8. Install oil filter cap and tighten to 25 N·m (18 ft. lbs.).

POLICY:

Information Only.