



## UPPER SHROUD

### REMOVAL

1. Position the steering wheel to its rear and lower position.
2. Using a trim stick and working under the on board panel, disengage the dashboard (1a) releasing its inner retainers (1b) and (1c), then move it back.

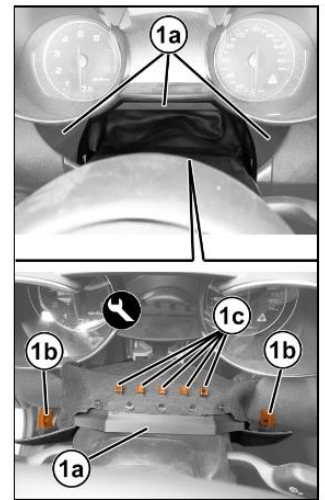


3. Remove the upper part (1a) of the steering column, releasing its inner side retainers (1b).

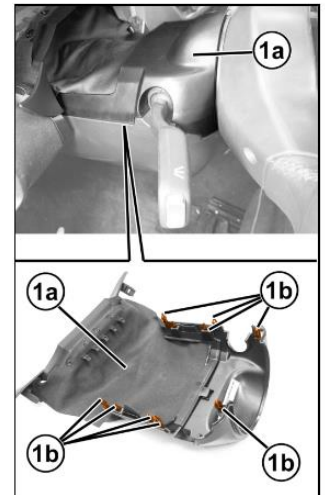


### INSTALLATION

1. Position the upper steering column shroud (1a) of the steering column, engaging its inner side retainers (1b).

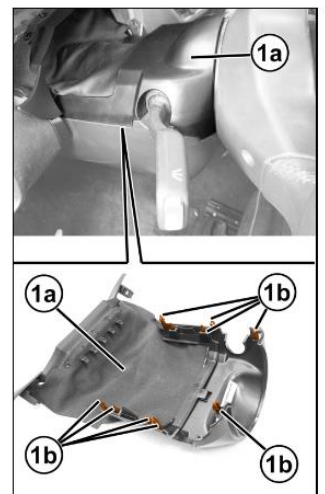

- ◆ Position the dashboard trim (1a) and engage the inner retainers (1b) and (1c).

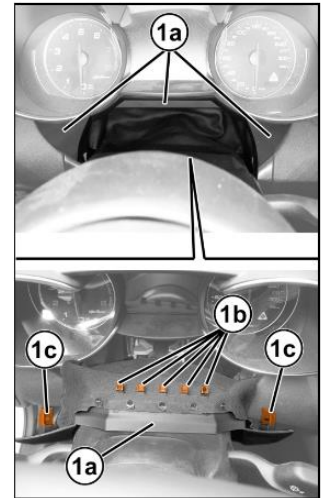


- ◆ Return the steering wheel to the correct position.

### LOWER SHROUD

#### REMOVAL

1. Remove the upper steering column shroud ([Refer to 19 - Steering/Column/SHROUD, Steering Column, Lower/Removal and Installation](#)).
- ◆ Remove the two lower steering column to column mounting bolts (1a).
- ◆ Release the lever (1c) and remove the lower steering column cover (1b) from the column.

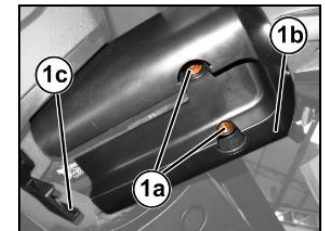

#### INSTALLATION

1. Check that the steering column trim is undamaged.
- ◆ Position the lower steering column shroud into position, engage the lever (1b) with the shroud.
- ◆ Install the two lower steering column shroud to steering column mounting bolts and tighten securely.

