


ECU Removal Instructions

The first step required to remove your ECU is to make sure your key is in your pocket or ANWHERE but in the ignition.

You will need the following tools:

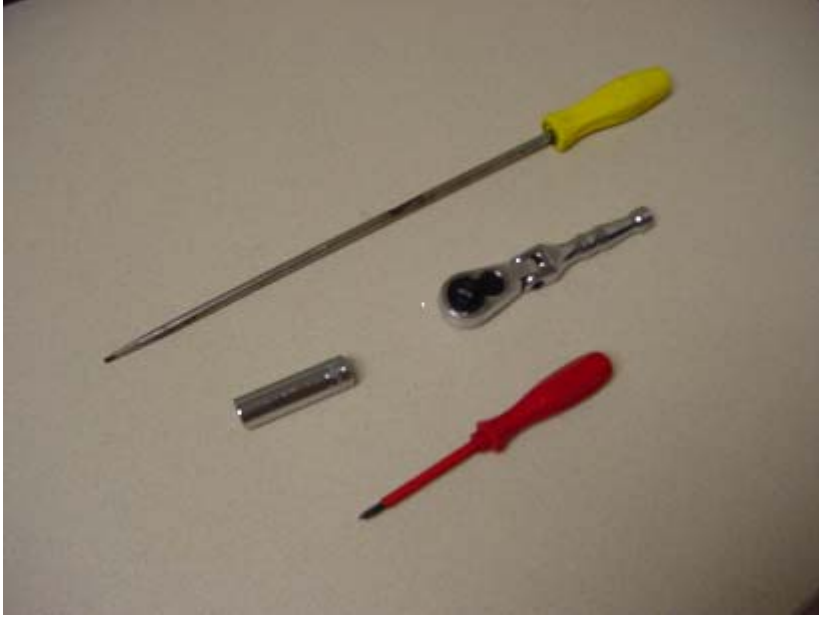

Step 1:

Open your hood



Step 2:

Remove your wiper blades. Start by removing the caps. The rest is self explanatory.



Step 3:

After you have removed both wiper blade slide your hands under the plastic shield making enough room to place two 3" scotch tape rolls or similar or wheel wedge.



Step 4:

You can now SEE the ECU as shown below. You will first need to remove the two connectors which are attached. They have vertical clips which secure them in place. You will need to slide the clips away from the connectors to free them.



Step 5:

There is a clip on the left side of the ECU shown below. This will need to be slightly bent to remove the ECU from the housing.



Once the clip is out of the way, use both hands evenly and simply pull the ECU outward.



You're all done!