

Please give copies to all Technical Bulletin

Subject: Tail Light Assembly, Removal Procedure

Group: 94

Number: 03-03

Model(s): Touareg 2004 ➤ See VIN below

Date: Sept. 30, 2003

Condition

If care is not taken, tail light assemblies may break during removal process.

Production


Enlarged fastening receptacle in body assembly beginning VIN: WVGCM67L84D016297

Service

If repair requires tail light removal, use the following procedure:

Tail light, Removing

- Open rear lid.
- Remove screw head trim covers -arrows-.

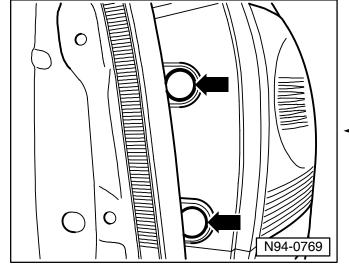

N94-0770

 Remove Torx screws with T-25 Torx screw driver.


Note:

In addition to the screws, the rear light housing is secured by a ball head in a securing clip, finish removal as follows.


<u>C 94–03–03</u> 1 of 2



Please give copies to all vour VW Technicians Technical Bulletin

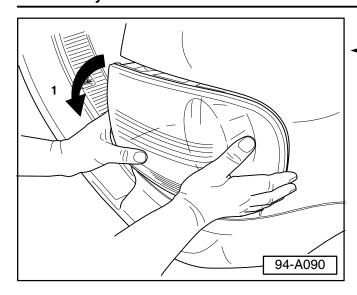

 Turn tail light in direction of -arrow- towards outboard side of vehicle until upper edge of tail light housing becomes visible.

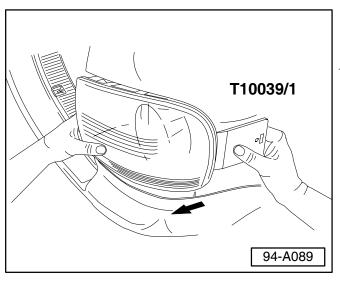

- Insert wedge tool T 10039/1 between body and outer edge of tail light.
 - Pull simultaneously with one hand and pop tail light (with wedge tool) in direction of -arrow-, until tail light is released.
 - Disconnect wiring harness from the tail light assembly.

C 94–03–03 2 of 2