




Alfa Romeo

QUICK
START
GUIDE

Stelvio

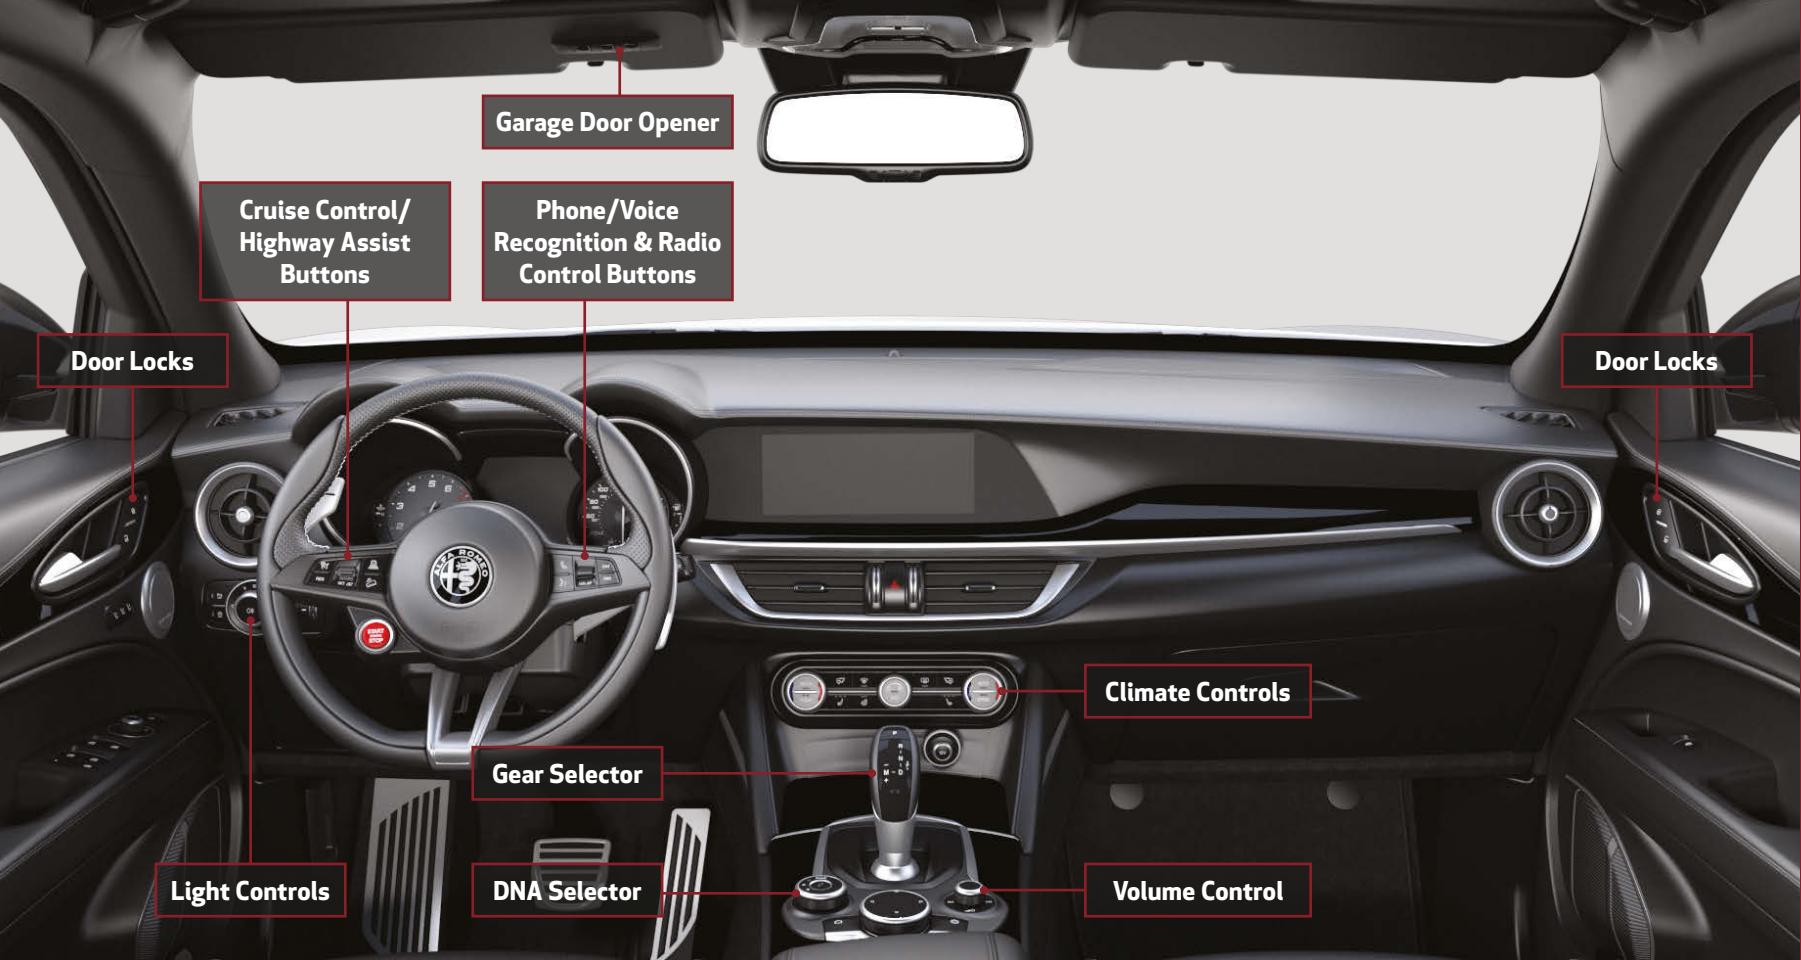

Garage Door Opener

Cruise Control/
Highway Assist
Buttons

Phone/Voice
Recognition & Radio
Control Buttons

Door Locks

Door Locks

Light Controls

Gear Selector

DNA Selector

Climate Controls

Volume Control

Garage Door Opener



1 While the car is ON, hold the handheld garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle.

2 Push and hold both the HomeLink® button being programmed and the button on the garage door transmitter.

TO ERASE ALL SET CHANNELS:

Push and hold the two outside HomeLink® buttons for 20 seconds until the orange indicator flashes. An individual channel cannot be erased.



ROLLING OR NON-ROLLING?

Check your garage door opener motor in your garage for a “LEARN” or “TRAIN” button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

3

For Non-Rolling Code garage door openers, watch for the indicator light to go constant.

For Rolling Code garage door openers, watch for the indicator light to go from a slow blink to blinking rapidly.

4

For Rolling Code garage door openers only, firmly push and release the “LEARN” or “TRAIN” button on your garage door opener motor in your garage, then push the HomeLink® button in your vehicle for two long presses.

5

If the programming was successful, your garage door should open and close with your chosen HomeLink® button.

Scan For
HomeLink®
Video



NEED ASSISTANCE?

1-800-355-3515

Pair a Phone



- 1** Make sure Bluetooth® is enabled on your mobile device
- 2** With the vehicle in the ACC or ON/RUN position, select the Settings tab and then "Infotainment"
- 3** Press "Bluetooth®"
- 4** Select "Add Device", then follow the prompts on your phone and on the touchscreen

CONNECT YOUR APPS

Connect your smartphone to the media USB port.

The Android Auto™ or Apple CarPlay® icon will launch on the touchscreen.

KEEP IN MIND:




For Android™ Users, if the Android Auto™ app was not previously downloaded, it will download the first time you plug in your device.



For Apple® Users, Apple CarPlay® is only compatible with iPhone® 5 or later and requires Siri being enabled in "Settings".

Ready to remove a phone or audio device?

- 1** Press the Settings tab.
- 2** Press "Infotainment" and then "Bluetooth®".
- 3** Select the desired Bluetooth® device.
- 4** Press "Remove Device". The device will be removed.

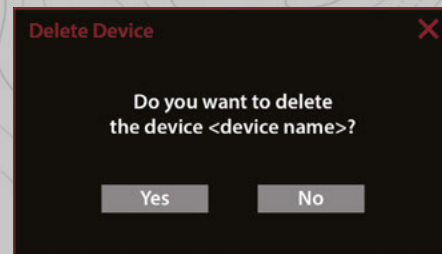

Connected Services

WITH CONNECTED SERVICES YOU CAN...



Lock Your Vehicle



Unlock Your Vehicle



Remote Start Your Vehicle




Cancel Remote Start



Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES

Press the Assist button on the touchscreen to directly speak with an agent who will begin setting up your Alfa Connect account.

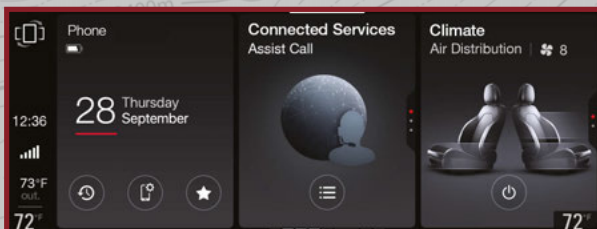

Alfa Connect

REAP THE BENEFITS OF YOUR OWNER'S PROFILE TODAY!

Get 24/7 Access To Everything You Need

- Custom vehicle dashboard
- Access to your vehicle's Owner's Information
- Schedule dealership service with ease
- Obtain special offers on Alfa service
- View maintenance records
- Mobile vehicle commands



Registering an account can be done through the vehicle's touchscreen! Follow the prompts to speak with an agent who will assist you with activating the feature.


*For Canadian customers, be sure to select the country and language prior to signing into Alfa Connect.

Scan For Owner's Profile Website



Scan me
(U.S. Residents Only)*

Lights & Wipers Operation

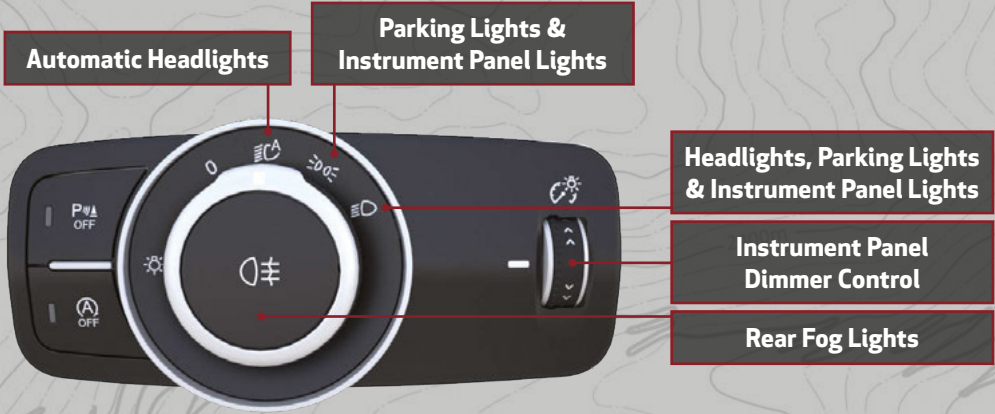

PUSH

TO ACTIVATE HIGH BEAMS

PULL

FOR FLASH-TO-PASS



TIP:
After selecting a wiper sensitivity, a quick upward tap of the lever activates the windshield wipers.

PUSH UP


TO MIST THE WINDSHIELD

PULL

TO ACTIVATE THE FRONT WINDSHIELD WASHER

ROTATE

THE SWITCH TO SELECT A SENSITIVITY

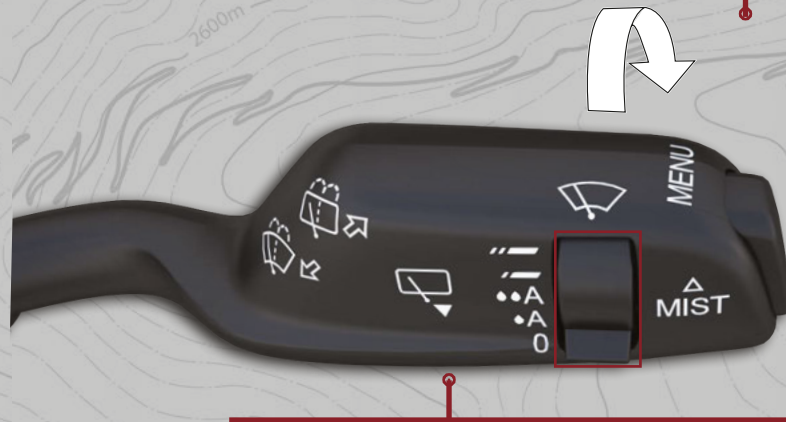

PUSH DOWN

TO ACTIVATE/DEACTIVATE THE REAR WIPERS


FRONT WIPERS

- HIGH
- LOW
- A RAIN SENSING HIGH
- A RAIN SENSING LOW
- 0 OFF

Scan For
Wipers Video



Climate Controls

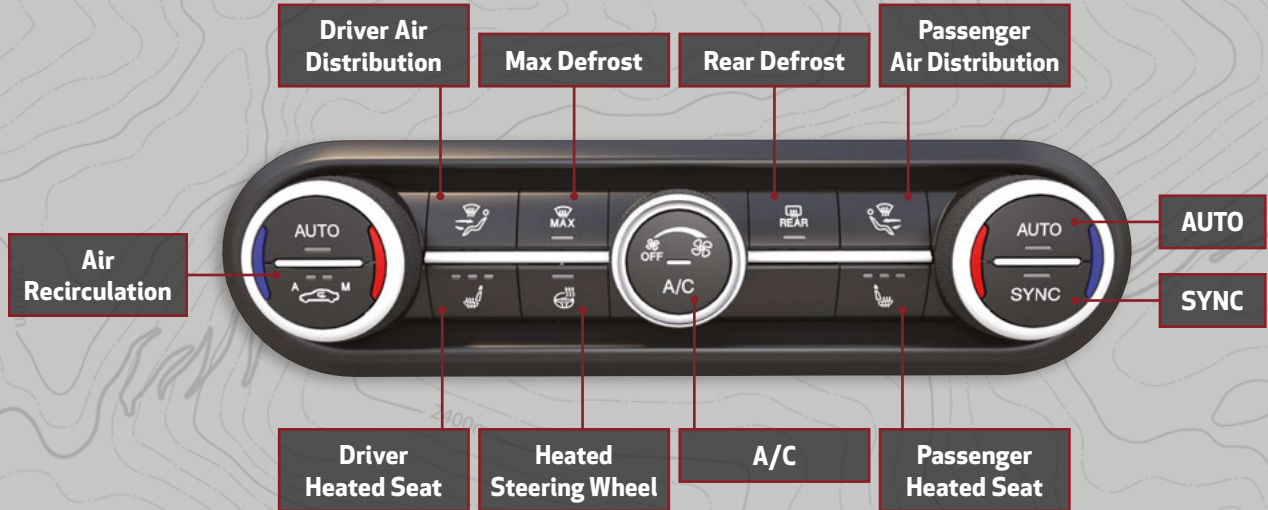

Scan For Climate Video




The **Driver Temperature knob** will control the temperature on the driver's side of the vehicle.



The **Recirculation button** will toggle between recirculation mode and outside air mode.

The **Blower Control knob** will regulate the amount of air forced through the system in any mode.

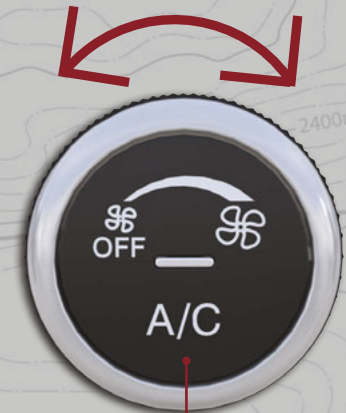

The **A/C button** will engage the Air Conditioning (A/C) system.


The **Passenger Temperature knob** will control the temperature on the passenger's side of the vehicle.



The **SYNC button** will sync the passenger side temperature with the driver side temperature.

Alfa DNA System

CHOOSE THE MODE THAT FITS YOUR DRIVING STYLE AND ROAD CONDITIONS:

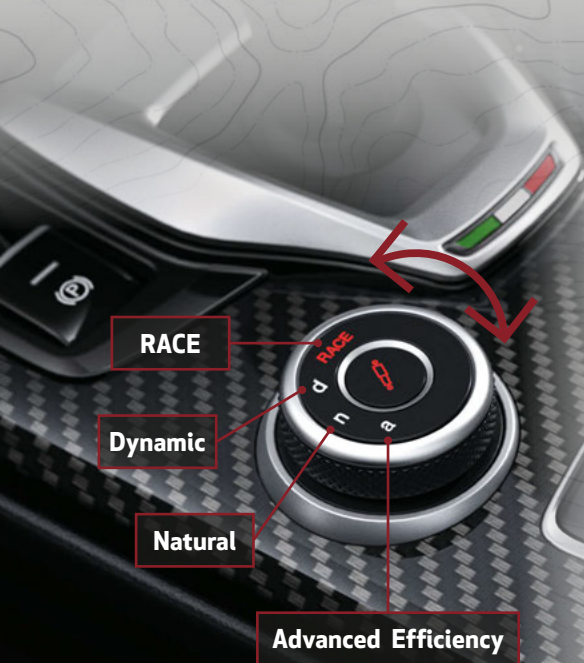

RACE

Track Race Driving Mode

Yellow theme in the instrument cluster display (Quadrifoglio Only)

Dynamic

Sports Driving Mode

Red theme in the instrument cluster display

Natural

Normal Driving Mode

Blue theme in the instrument cluster display


Advanced Efficiency

ECO Driving Mode for max fuel savings


Green theme in the instrument cluster display

Information And Entertainment System

Control your Alfa's Information And Entertainment System through the controls on the center console or through the touchscreen radio.

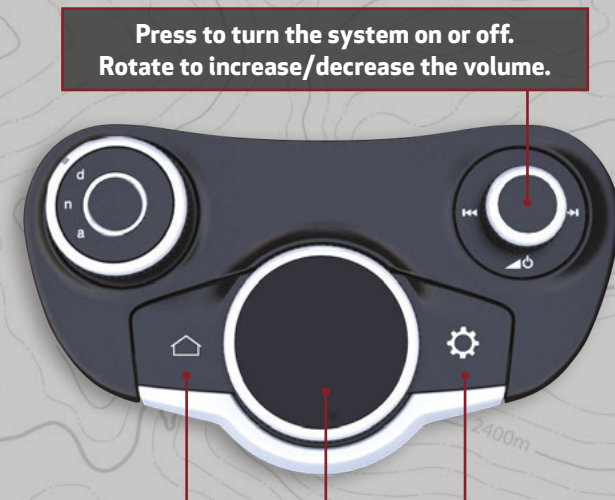

Touchscreen Widgets

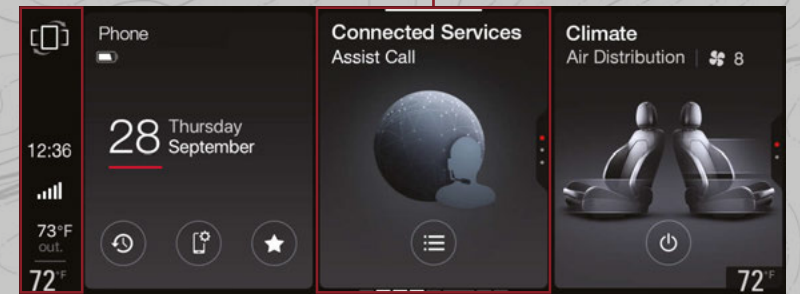

Status Bar

Touchscreen Buttons


















 


















 




 









 
 
 


 





















Press to access the main menu.

Press to access the settings menu.

Rotate to scroll through menus and Widgets. Press to select any options.

Swipe left or right on the touchscreen to scroll through the available menus and Widgets.

Warning & Indicator Lights

	Air Bag		Alfa Steering Torque (AST) Failure		Alternator Failure		Automatic Transmission Failure		Brake		Brake Disc Temperature
	Door Open		Driver Attention Assist (DAA) System Activation		Electronic Brake Force Distribution (EBD) Failure		Electronic Throttle Control (ETC)		Engine Coolant Temperature Too High		Hood Cap Not Properly Shut
	Insufficient Engine Oil Level		Low Engine Oil Pressure		Oil Temperature		Power Steering Failure		Seat Belt Reminder		Trunk Lid Not Properly Shut
	Anti-Lock Brake System (ABS) Activation		Adaptive Front Lighting System Failure		All-Wheel Drive Failure		Anti-Lock Brake System (ABS)		Audio System Failure		Automatic High Beam Headlights Failure
	Automatic Transmission Fluid Overheating		Blind Spot Monitoring (BSM) System Failure		Driver Attention Assist (DAA) System Failure		Dusk Sensor Failure		Dynamic Drive Control System Failure		Electric Park Brake Failure
	Electronic Stability Control (ESC)		Electronic Stability Control (ESC) OFF		Engine Check/Malfunction		Engine Immobilizer Failure/Break-In Attempt		Engine Oil Change Required		Engine Oil Level Sensor Failure
	Engine Oil Pressure Sensor Failure		Exterior Lights Failure		Forward Collision Warning (FCW)		Forward Collision Warning (FCW) System Failure		Fuel Cut-Off		Fuel Cut-Off System Failure
	Fuel Level Sensor Failure		Fuel Reserve/Limited Range		Generic Indication		Highway Assist/Traffic Jam Assist System Failure		Ice Risk		Keyless System Failure
	Lane Departure Warning (LDW) System Failure		Loose Fuel Filler Cap		Low Coolant Level		Park Sensors System Failure		Power Liftgate Fault		Rain Sensor Failure
	Rear Fog Lights		Service Adaptive Cruise Control (ACC) System		Shock Absorbers Failure		Soft Suspension Calibration Insertion		Speed Limiter System Failure		Stop/Start System Failure
	Temporary All-Wheel Drive Failure		Tire Pressure Low		Tire Pressure Monitoring System (TPMS)		Wear On Brake Pads		Wear On Carbon Ceramic Material (CCM) Brake Discs		Windshield Washer Liquid Level
	Windshield Wiper Failure		Adaptive Cruise Control (ACC)		Automatic Headlights		Automatic High Beam		Cruise Control Activated		Headlights
	Left Turn Signal		Parking/Headlights On		Right Turn Signal		Stop/Start		Automatic High Beam Headlights		High Beam Headlights

For additional information on any of the topics in this publication, please refer to your Owner's Manual.

©2022 FCA US LLC. All Rights Reserved. ALFA ROMEO is a registered trademark of FCA Group Marketing S.p.A., used with permission. App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

Second Edition
GU_QSG_EN_USC_BA