

**IF CAR IS DEAD AND LOCKED IN PARK, FOLLOW THESE INSTRUCTIONS TO UNLOCK TRANSMISSION TO ALLOW CAR TO BE MOVED:**

- 1. Car automatically goes into Park when engine is shut off. If engine can't be restarted (dead battery, for instance), the only way to get transmission out of Park is to insert tool in threaded boss on transmission housing. See both photos.**
- 2. Threaded boss is on left (driver's) side and near the front of transmission.**
- 3. Boss can be reached with car on the ground. Mind the hot exhaust. Thread tool into boss far enough to contact lever and push lever up to disengage Park.**

