

Technical Bulletin



Condition

Tail Light Assembly, Removal Procedure

94 06 21 Dec. 5, 2006 2010564 Supersedes T. B. Group 94 number 04-02 dated August 5, 2005 due to inclusion into ElsaWeb.

Model(s)	Year	Eng. Code	Trans. Code	VIN Range From	VIN Range To
Touareg	2004	All	All	All	All


Technical Background

Tail light assemblies may break during removal process if incorrect tool is used.

Production Solution

No production change required.


Service

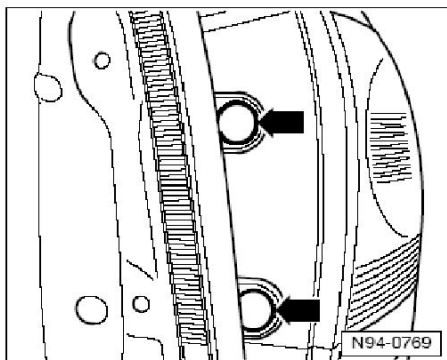

If repair requires tail light removal, use the following procedure:

- Open rear lid.
- Remove screw head trim covers -arrows-.


Technical Bulletin

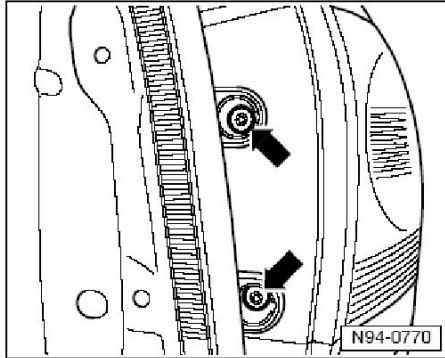

- Remove Torx screws with Torx screw driver.



In addition to the screws, the rear light housing is secured by a ball head in a securing clip, finish removal as follows.

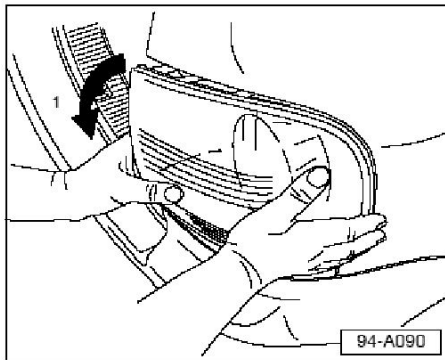

- Turn tail light in direction of -arrow- towards outboard side of vehicle until upper edge of tail light housing becomes visible.



With tail light tipped out:

- Insert the edge of BluePoint* Inflate-A-wedge tool (BF272) (available from your local SNAP-ON* dealer or from Equipment Solutions) between the body and outer edge of the tail light as shown.
- Hold tail light with one hand and squeeze the bulb of the Inflate-A-wedge tool (BF272) as necessary until tail light is released.
- Disconnect wiring harness from the tail light assembly.

Technical Bulletin



Warranty

Information only.

Required Parts and Tools

No Special Parts required. Always see ETKA for the latest part(s) information.

Description	Tool No:	Quantity
Inflate-A-wedge	BF272	1

Additional Information

*) SNAP-ON, BLUE POINT, are registered trademarks of Snap-on Incorporated in the United States.