VW Vortex's Veedubgli shows us the B*TCH CLIP on the A-Pillar (It didn't get the name for nothing;-) Just carefully pull the top of the A-pillar out until you can see it, make sure not to get the airbag, and use a screwdriver to push the clip out of the A-pillar and off the post it clamps to. Installation is reverse of removal, if you start the clip at the top it is a little easier to push down vs trying to get it in there after the a-pillar is back in.....pics worth a thousand words-












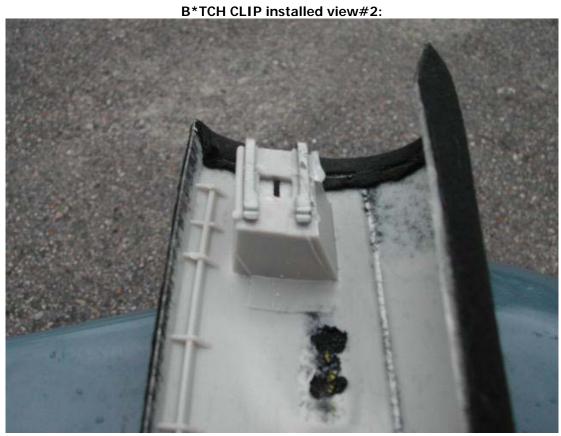

B*TCH CLIP has to clamp onto this:

