



MAP ALF-GIU-CBE-STR

Install Instructions



What's in the box?

- x1 Front pipe
- x1 Two Piece Midpipe
- x1 Axle-back
- x1 Torco Clamp
- x2 V-band Clamps

Tools needed



You will need:

- 15mm socket
- 12mm socket
- 3/8ths ratchet

Step 1



Remove 2 nuts holding exhaust to downpipe

Step 2



Remove mid hanger

Step 3



Remove muffler hanger (easier to unbolt)

Step 4




Remove midpipe bracket

Step 5



Remove entire exhaust as one

Step 6

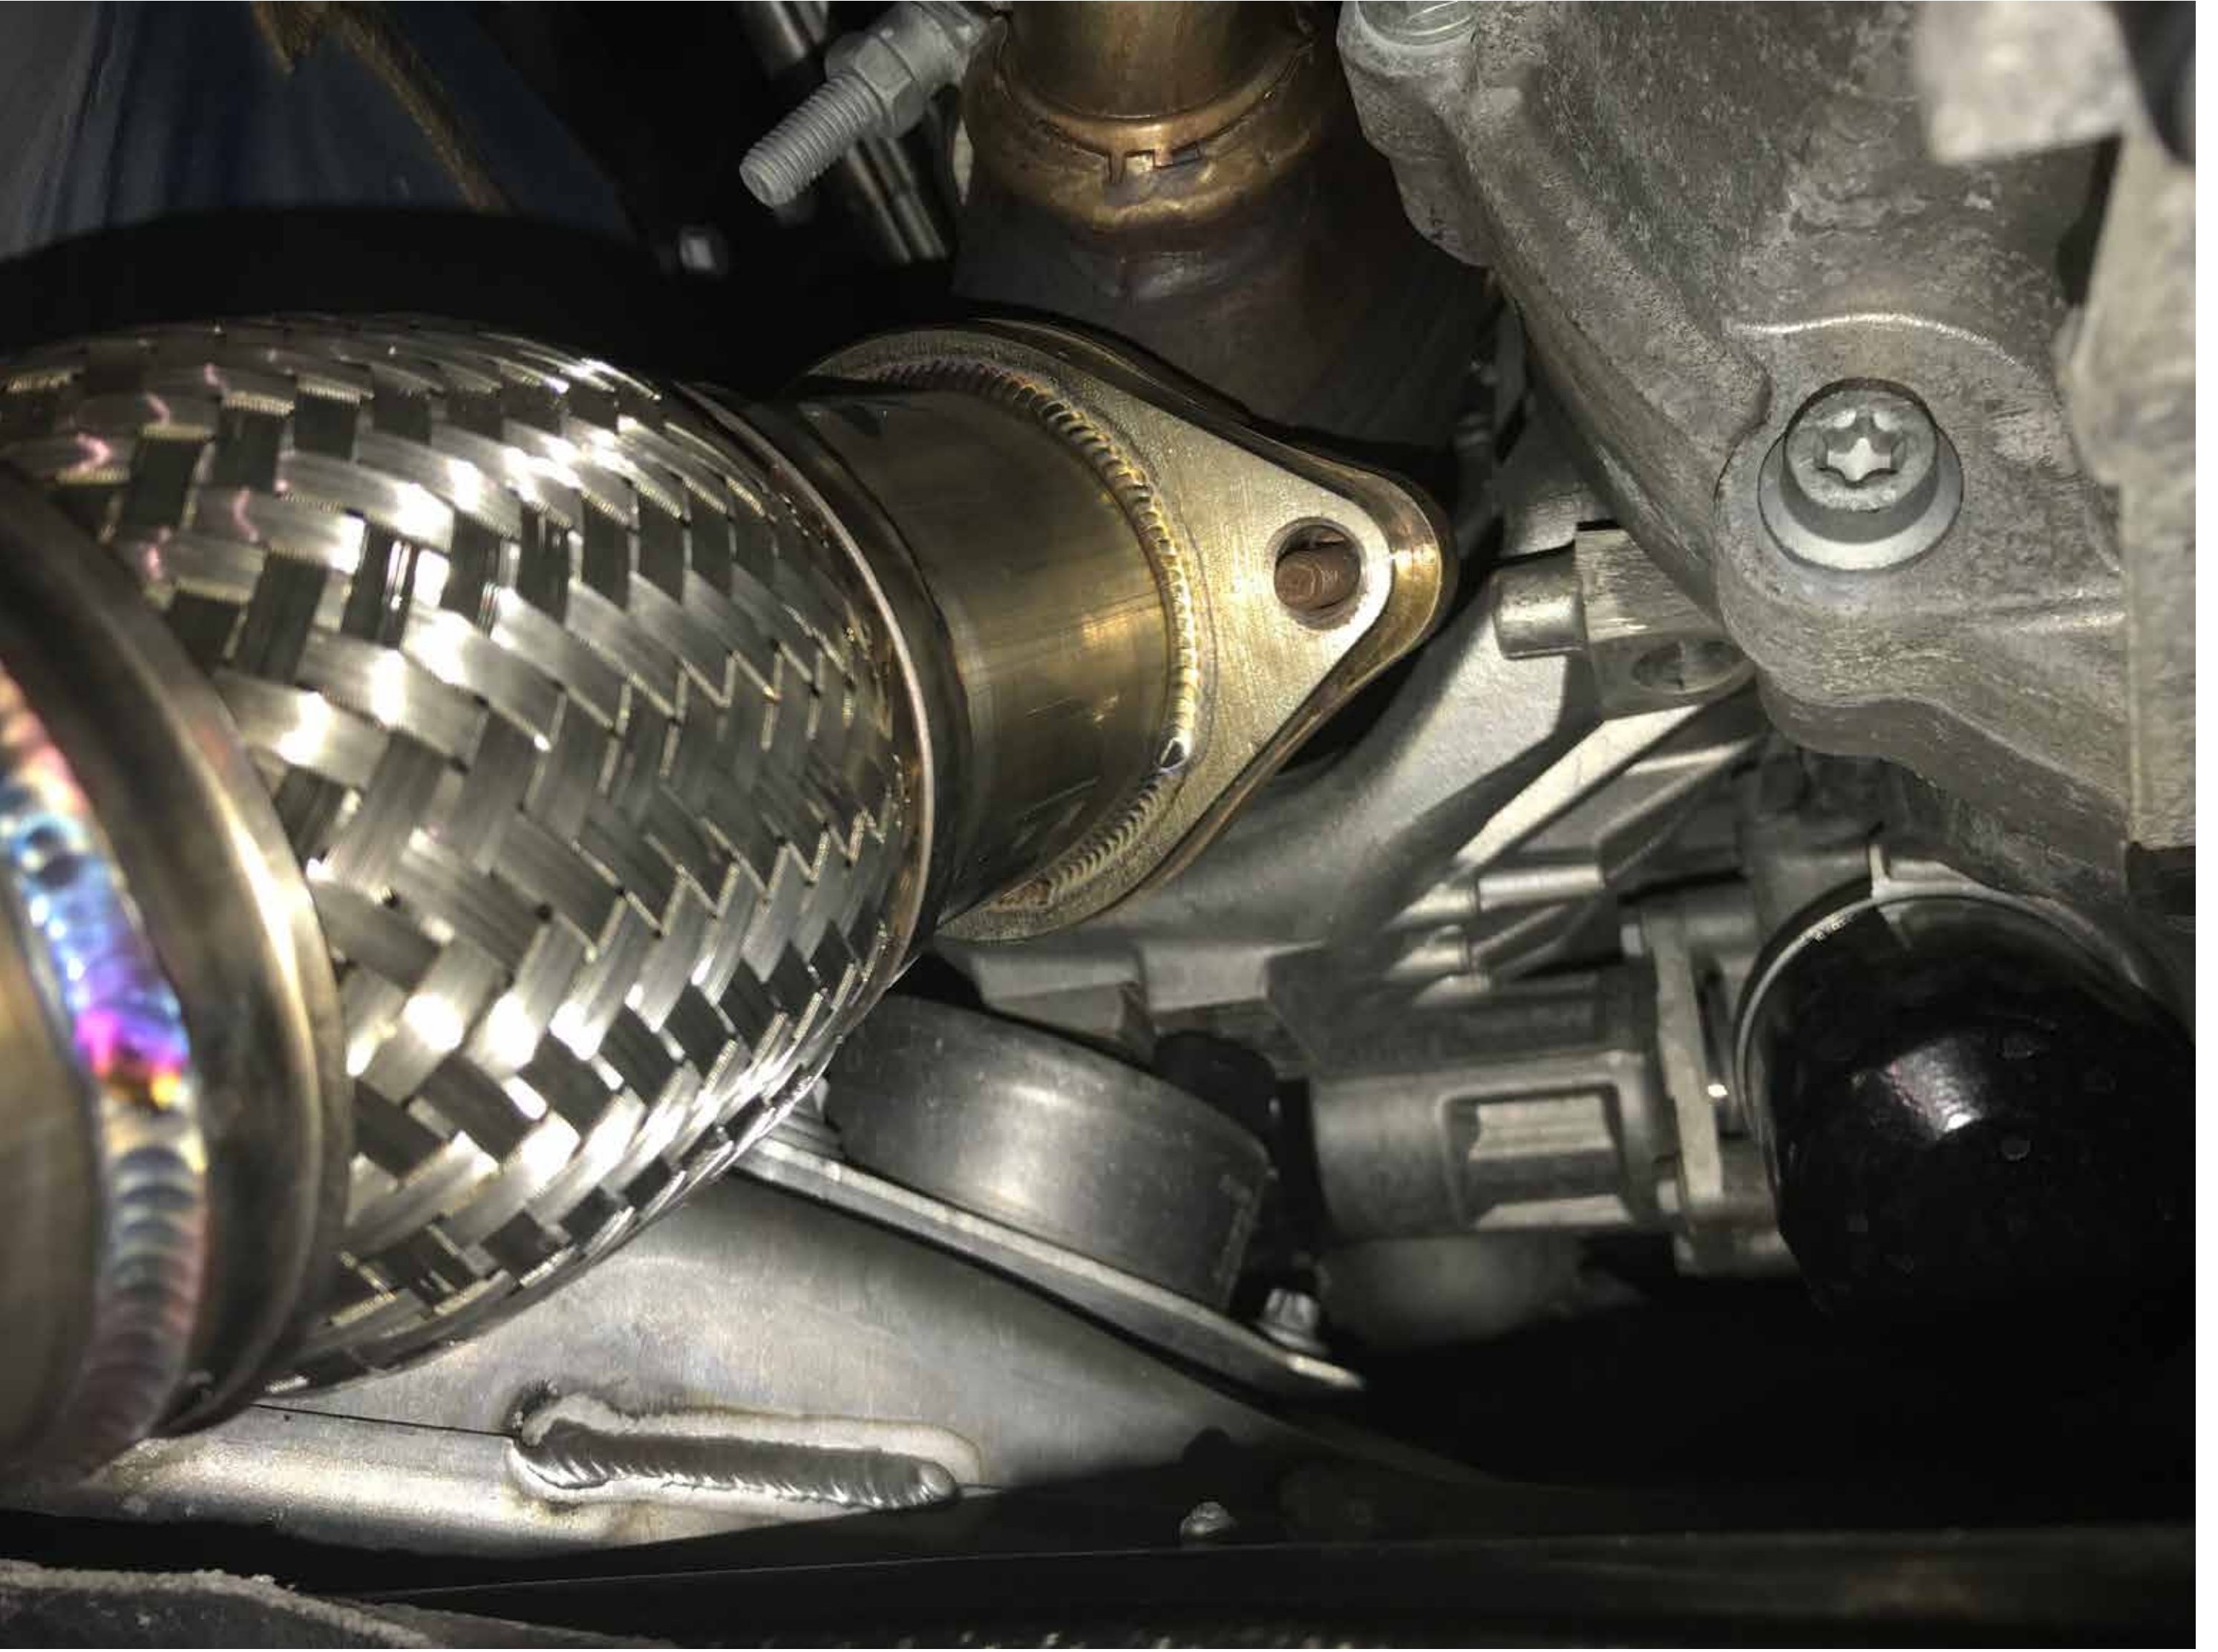

Install the flex section onto the downpipe

Step 7



Installed mid pipe bracket

Step 8



Install muffler section with stock hangers

Step 8.1




Install midpipe section, secure to front section with slip clamp

Step 9



Install midpipe section, secure to front section with slip clamp

Step 10

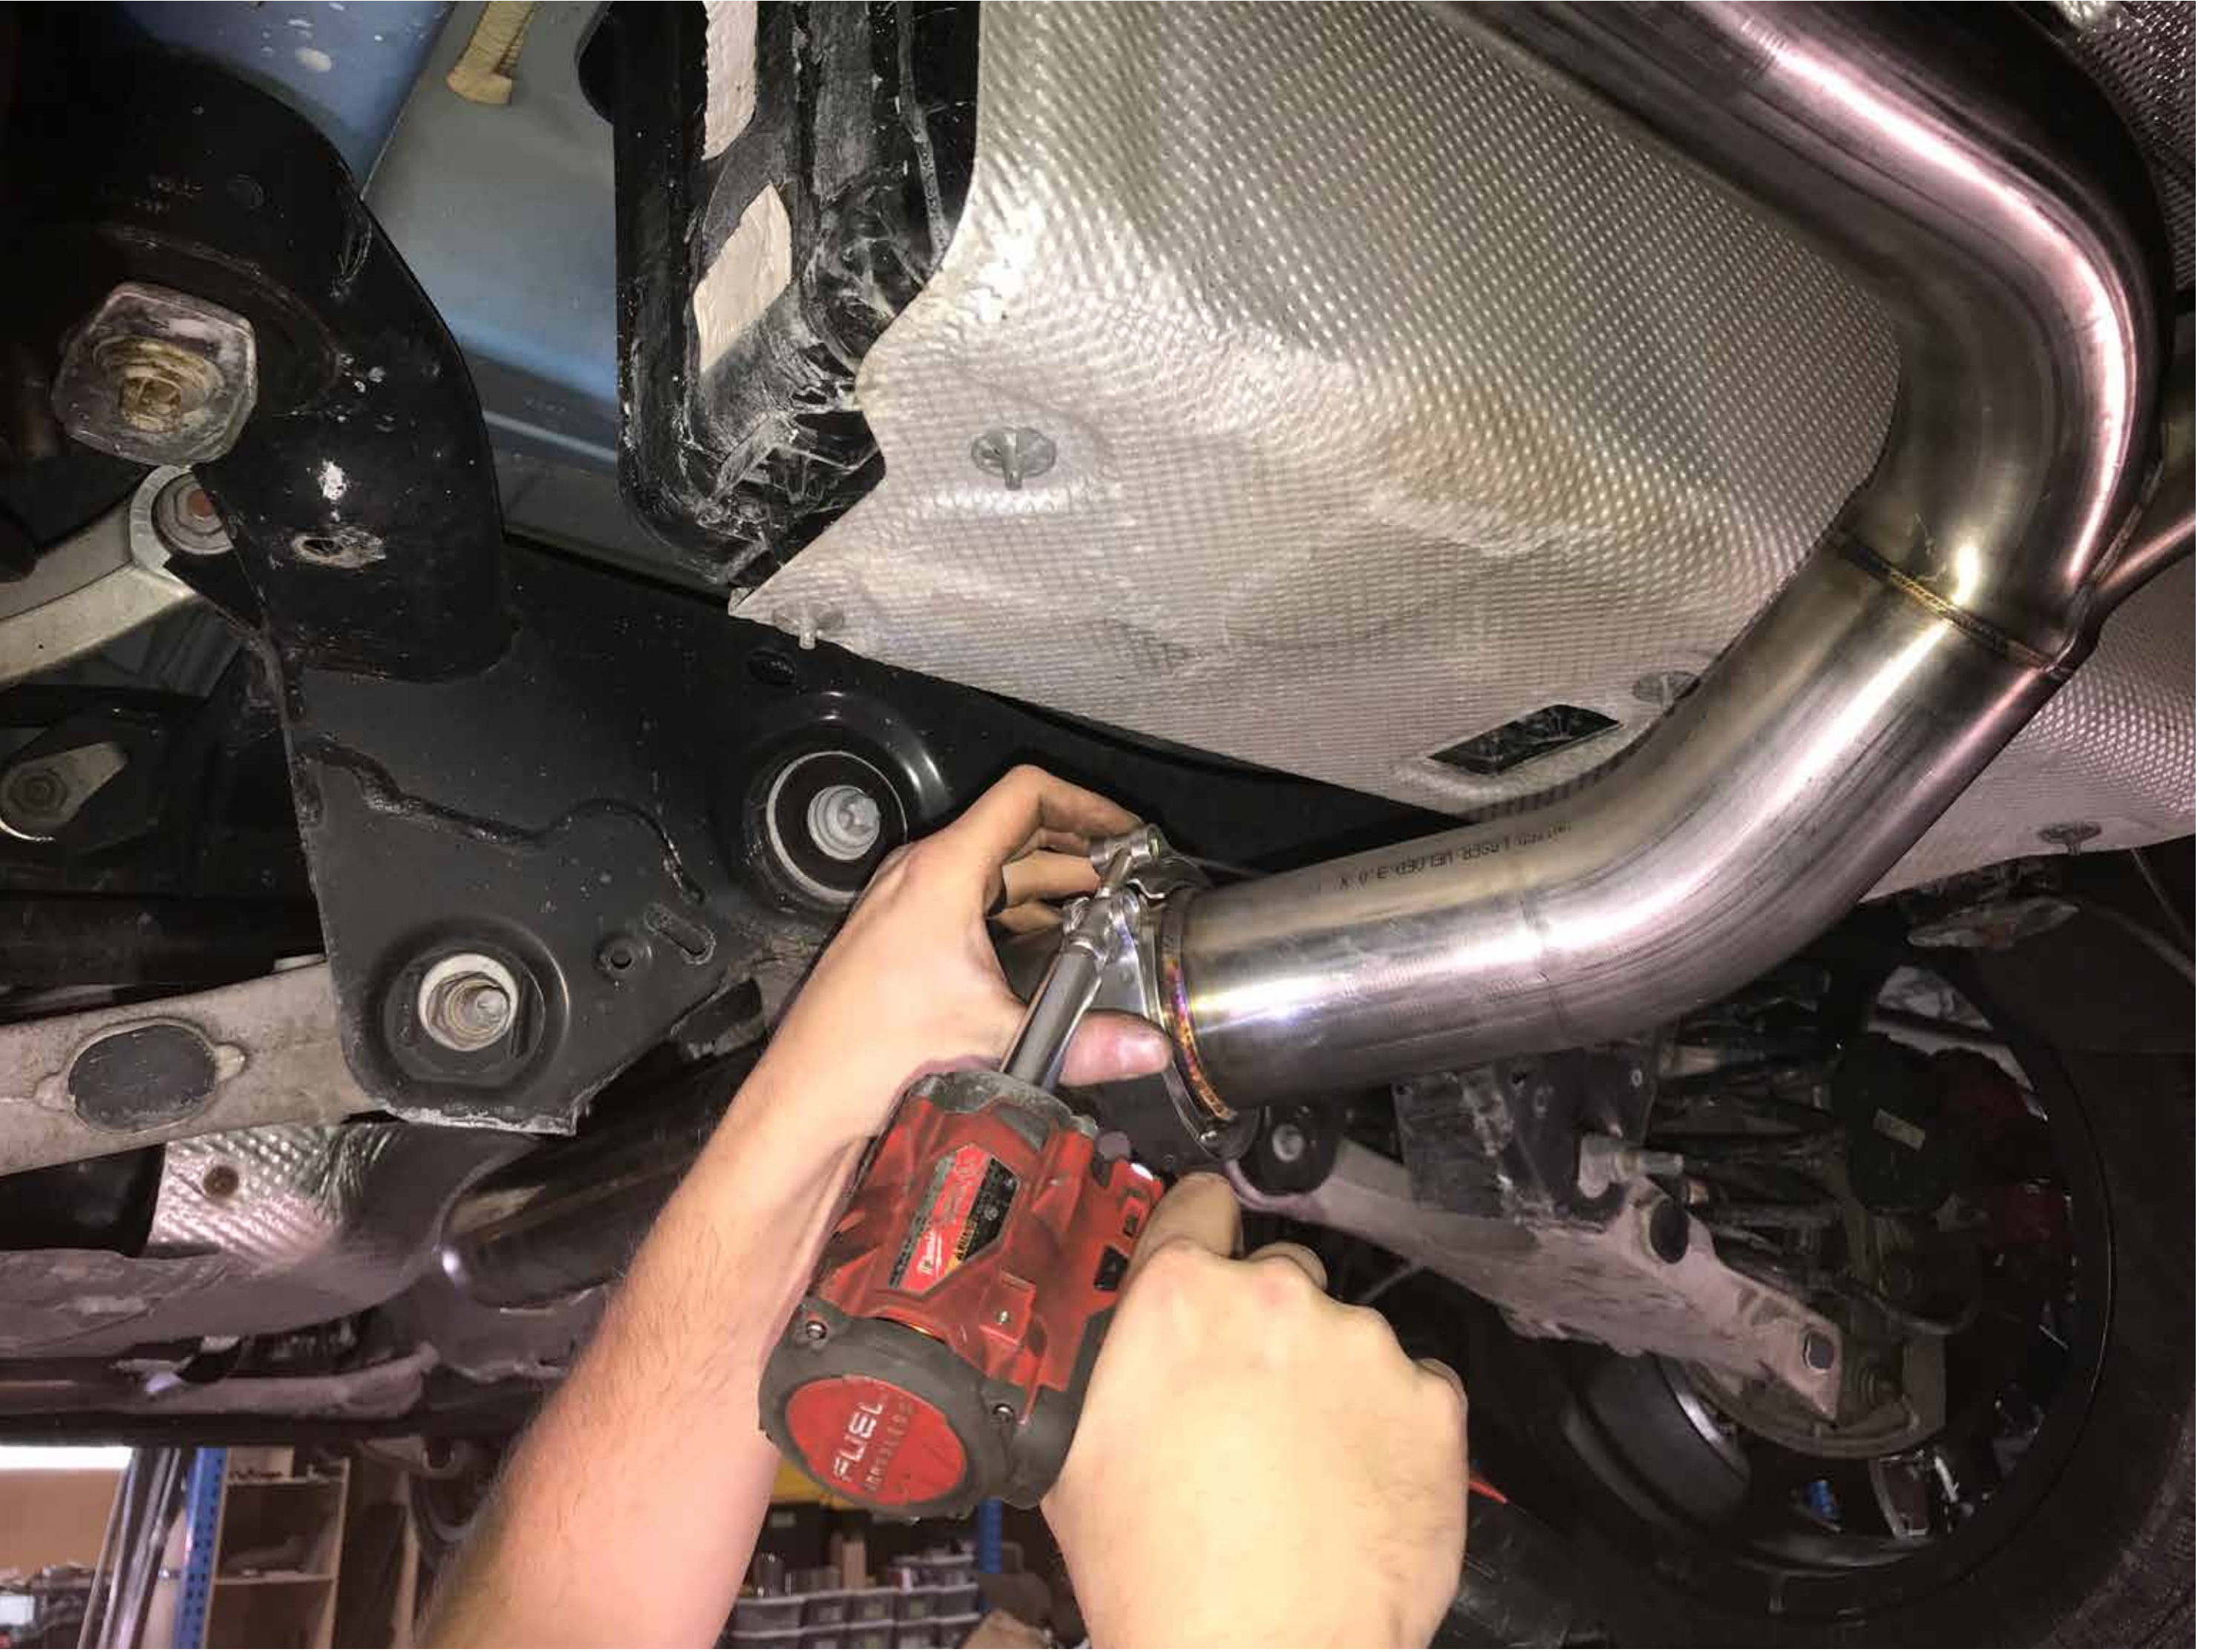

Attach midsection to muffler section

Step 11




Verify tip placement is center and even on both sides, if not you will need to adjust by loosening the 2 slip clamps and rotating until it fits correctly

We hope you enjoy your purchase! Reach out to us with any issues or concerns.



1-888-627-3736

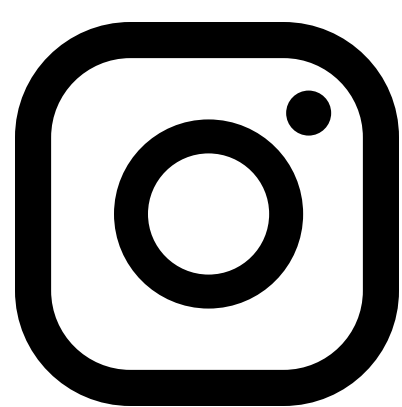

@maperformance



support@maperformance.com



www.facebook.com/modernautomotiveperformance/

