

NEUSPEED®

PROTECTIVE HEIM-JOINT BOOTS - PART #32.10.70 FOR USE WITH PART #32.10.69

PARTS LIST:

2 - PROTECTIVE HEIM-JOINT BOOTS


TOOLS REQUIRED:

1 - VICE


1 - ALL PURPOSE GREASE

1 - WD-40


1. Remove heim-joint from control arm and place in vice securely

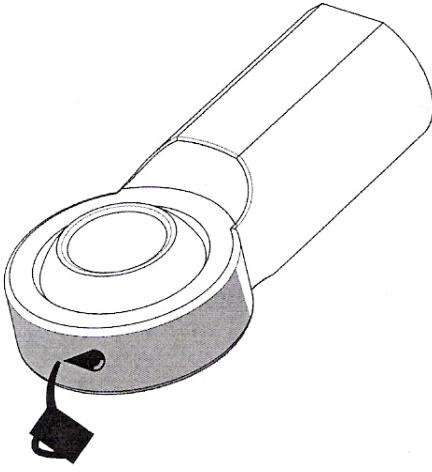


2. Lubricate outside of heim-joint with all purpose grease as shown.

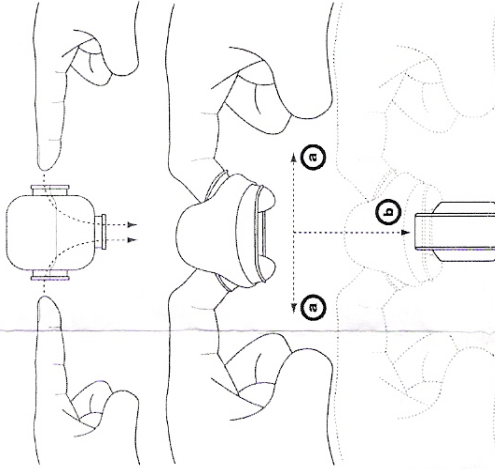


3. Insert fingers into boot as shown above. Stretch open neck of boot and pull down over lubricated heim-joint.

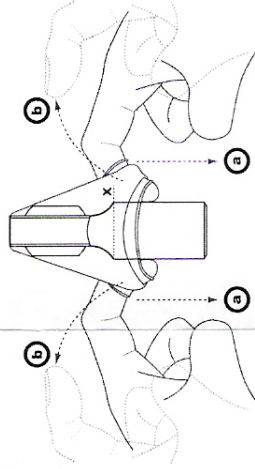


4. The neck of the boot must be pulled down past [X] in figure above. Remove fingers carefully.

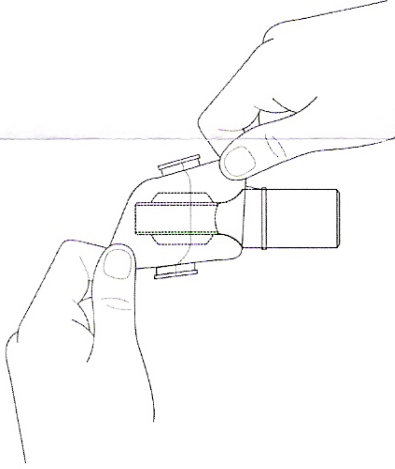

5. Center heim-joint inside of boot for proper fit and hole alignment.

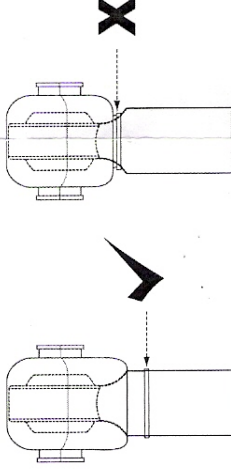

6. Make sure neck of boot resides on heim-joint body for proper seal and protection against the elements.

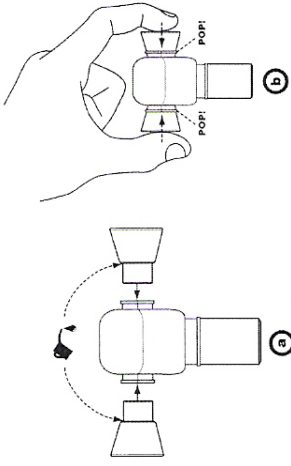

7. Use a small squirt of WD-40 on spacers and insert into boot and heim-joint end. Spacers will subtly pop into place.

8. Re-install heim-joint on control arm. Makes sure to re-measure length before installation. Measurement from center of hole on fork to center of hole in heim-joint should be 20 3/8".