

NEUSPEED®

7/8" (22mm) REAR ANTI-ROLL BAR

FITS VW GOLF IV R32

PART # 25.10.22.8

INSTALLATION INSTRUCTIONS

PARTS LIST:	1 – ANTI-ROLL BAR	1 – PKG. SILICONE GREASE
	2 – BUSHINGS	2 – M10 NYLOC NUTS
TOOLS REQUIRED:	1 – RATCHET	1 – 17mm WRENCH
	1 – 6" EXTENSION	1 – SMALL SCREWDRIVER
	1 – 13mm SOCKET	1 – TORQUE WRENCH
	1 – 16mm WRENCH	

1. Park car on a flat, level surface capable of supporting the vehicle's weight on jack and jack stands.



2. Using the manufacturers recommended lifting point(s), raise rear of vehicle and support with jack stands. **NEVER WORK ON A VEHICLE SUPPORTED ONLY WITH A JACK!**



4. Remove exhaust from vehicle.



3. Loosen exhaust clamp (17mm Hex) and disconnect exhaust from catalyst. Disconnect left and right exhaust hangers and vacuum hose from diaphragm.




5. Using a small screwdriver, remove fasteners securing heat shield and remove heat shield.



6. Disconnect end links from anti-roll bar by securing stud with 17mm wrench and loosening nut with 16mm wrench. (Left side shown, repeat for right side)



8. Apply supplied grease to inside of supplied bushing and install bushing onto supplied bar. (Left side shown, repeat for right side)

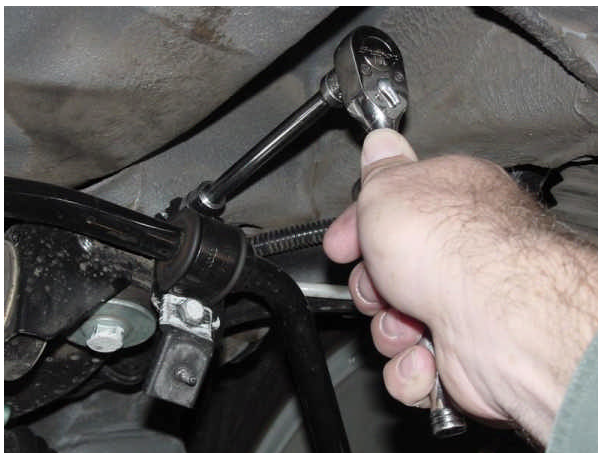


7. Remove four mounting bolts (13mm hex) and remove anti-roll bar from vehicle.

9. Position supplied bar on end links and install nuts. Torque to 30 Nm (22 lbf ft.)

10. Rotate bar up to sub-frame, position mounting clamps and install bolts (13mm Hex). Torque bolts to 25 Nm (18 lbf ft.)

11. Install heat shield and exhaust in reverse of removal.

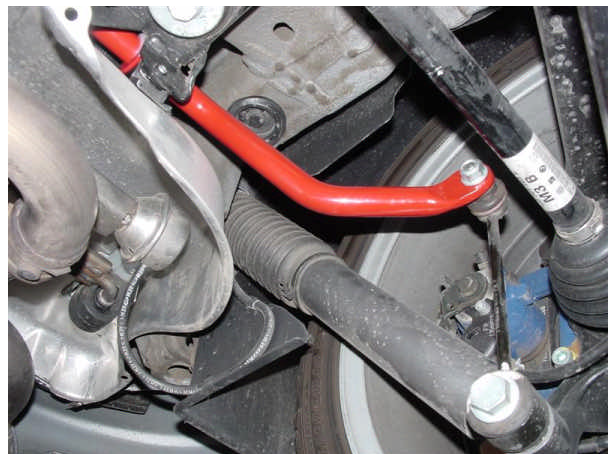

9. Installation is complete.

10. Double-check complete installation and TEST DRIVE CAREFULLY!