

A

B

C

D

E

F

G

Pendulum Engine Mount

Fitting Instructions:

- 1) Support engine with device.
- 2) Remove Pendulum support to subframe bolts x 2
- 3) Remove Pendulum support to transmission bolt x 1
- 4) Remove Pendulum support to transmission bracket bolt x 1
- 5) Fit new mount and secure to following torque settings:


Pendulum support to subframe bolts x2
24 Nm (18 ft-lb)

Pendulum support to transmission bolt x 1
40 Nm (30 ft-lb)

Pendulum support to transmission bracket bolt
40 Nm (30 ft-lb)

FITS FOLLOWING VEHICLES:

Golf MK4 2.0 / 1.8T / VR6 / V6 4Motion
 Jetta MK4 2.0 / 1.8T / VR6
 Bora 2.0 / 1.8T / V6 (4motion)
 Beetle 2.0 / 1.8T
 Audi A3 / S3
 Audi TT

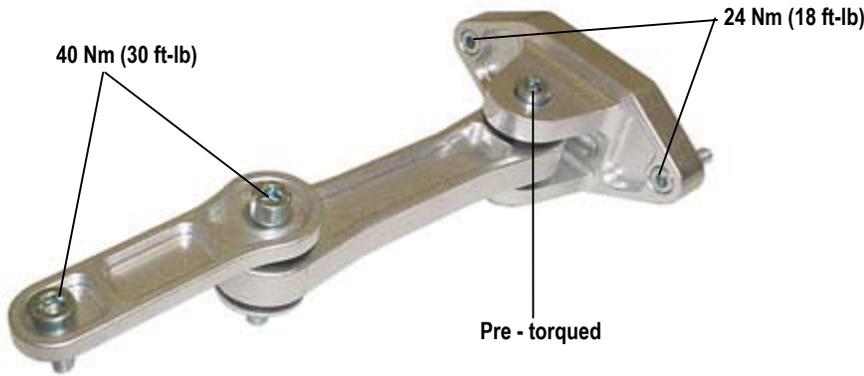

Warranty:

12 months from date of purchase or 12,000 miles whichever occurs sooner on mount only. No liability is accepted for improper use, improper fitment or if product is altered in any way.

ALWAYS DOUBLE CHECK FITMENT AND MAINTAIN PRODUCT AT REGULAR INTERVALS

CHECKED

REGULARLY CHECK THE WEBSITE FOR LATEST PRODUCT UPDATES AND CHANGES.

Zurich Engineering, Inc.

www.z-engineeringUSA.com

VW M4 CHASSIS PENDULUM MT

THE PRODUCT AND INFORMATION SUPPLIED IS THE SOLE PROPERTY OF ZURICH ENGINEERING, INC. ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF ZURICH ENGINEERING, INC. IS PROHIBITED.

TOLERANCE

DRAWN

QUAL ENG

MFG ENG

FINISH

REVISION: 21-OCT-01

A

B

C

D

E

F

G