



Installing S550 Mustang Vanity LEDs in the Sun Visors

After watching the vendor YouTube video and receiving no response to my questions/concerns over their method damaging the sockets and bulbs, I assembled the following guide- a little more involved than their quick and dirty method but in the end faster with less risk and effort.

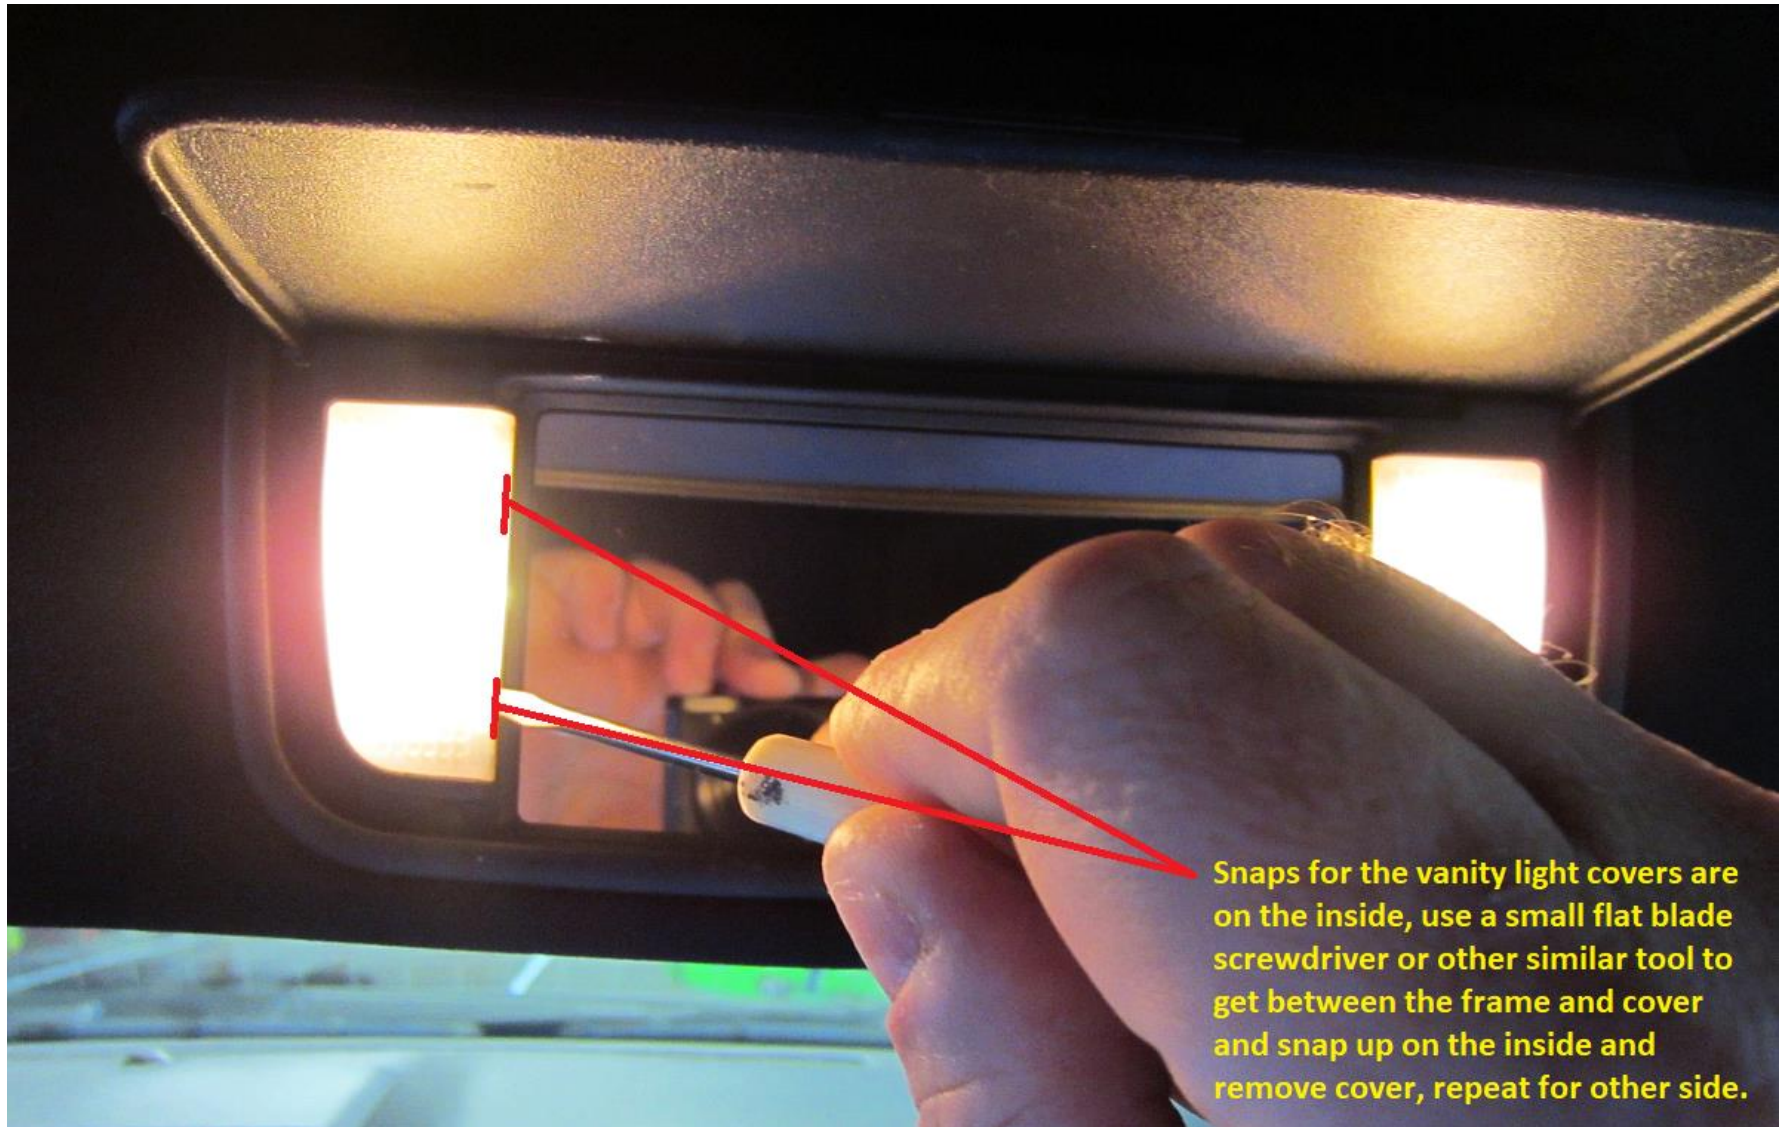

Remove the two Phillips screws

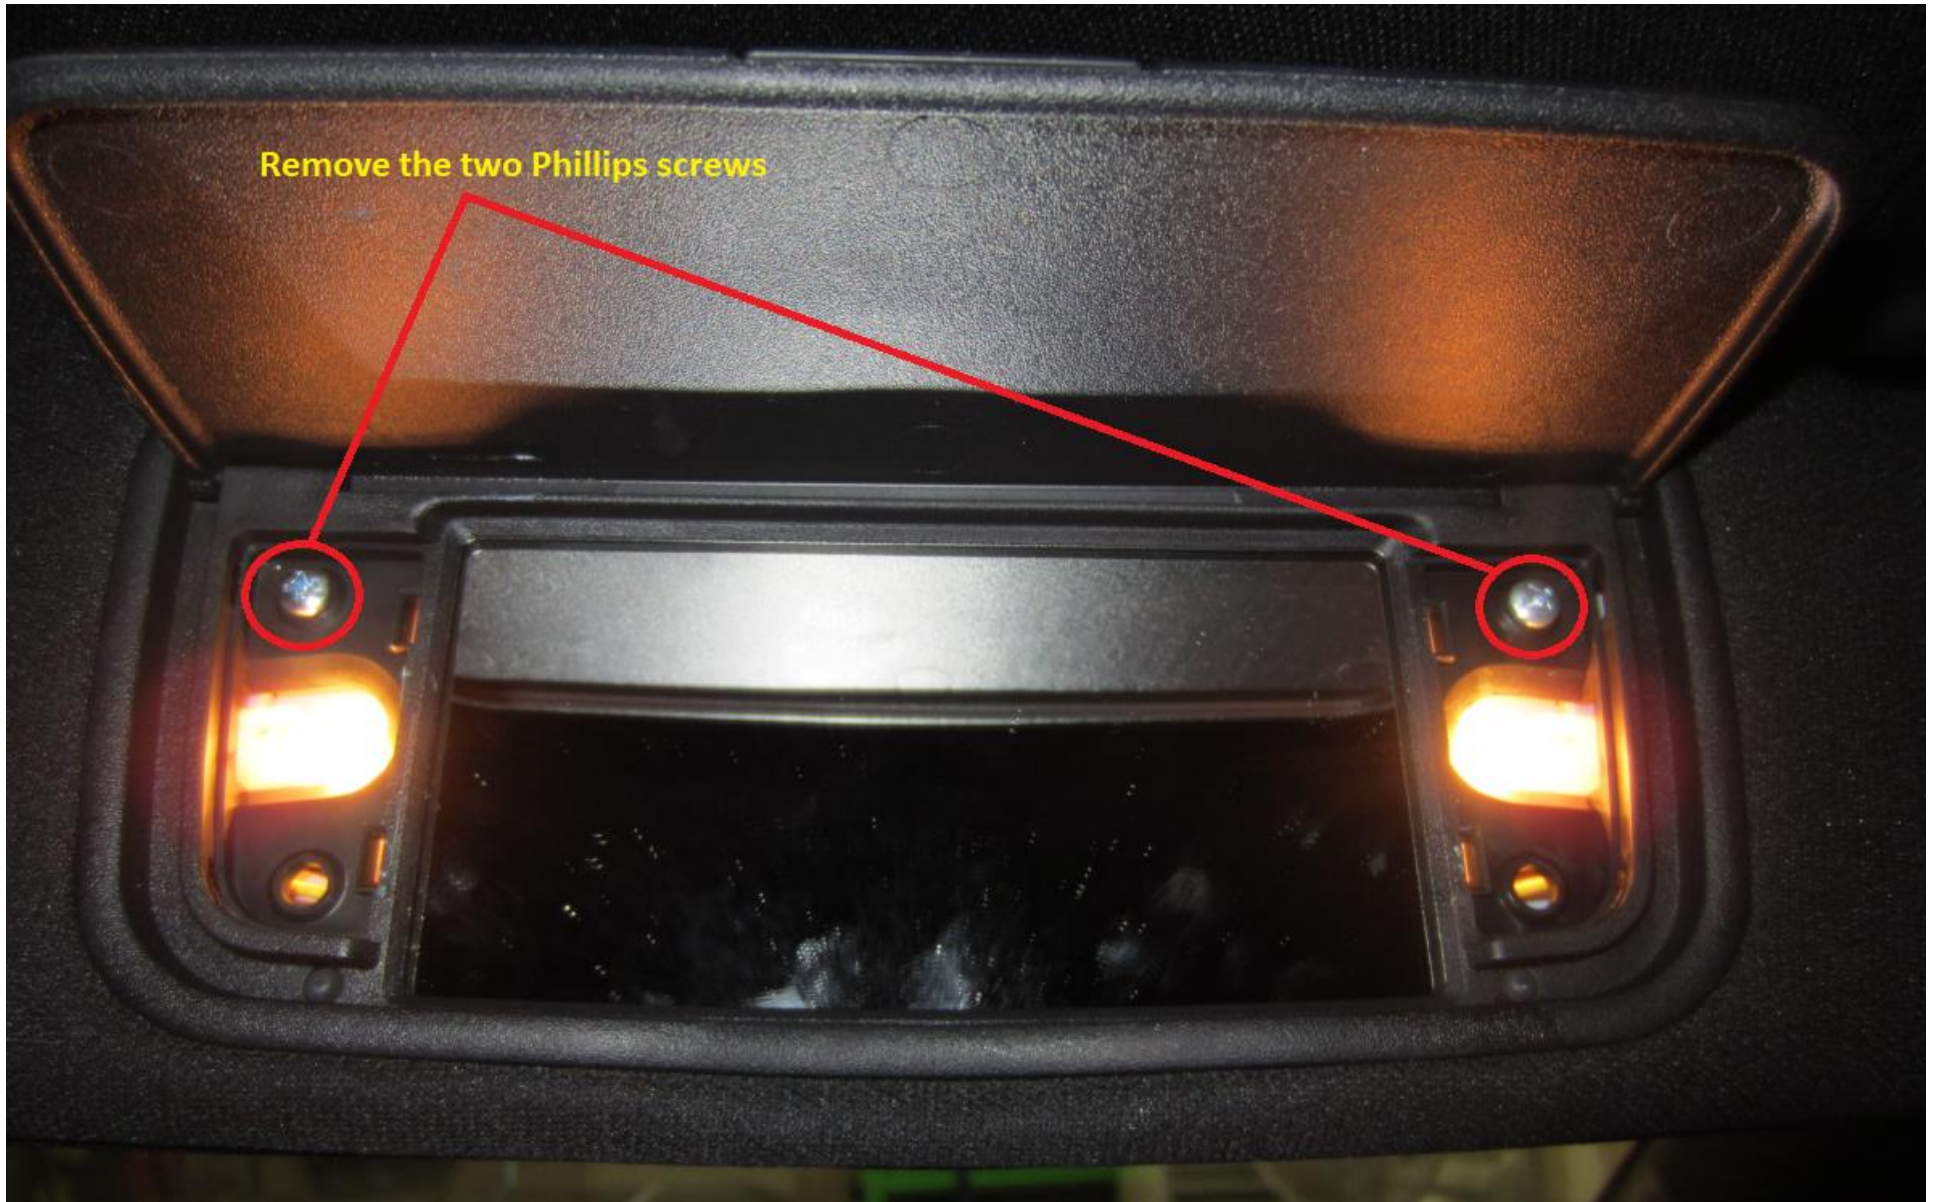

With mirror cover still open, pull at the top to release snaps and lift out of visor.

Lights can now easily be swapped out and switch pressed down to make sure LEDs work and that polarity is correct- if not, remove and turn 180 degrees and try again.

There are three tabs on the mirror cover that need to be aligned/inserted at the bottom of the frame before snapping back in at the top, the mirror cover also needs to be closed before snapping back in so that it is in the correct position for the switch- with the mirror cover removed you can open and close it to see how it activates the switch.



Reassemble and

DONE :-)

