

ULTIMATE **R A C I N G**

07+ BMW 335 E92 Coupe / E90 Sedan Cold Air Intake Installation

Thank you for purchasing the Ultimate Racing BMW 335 Cold Air Intake. Like all of our products, this piece was developed using Ultimate Racing's vast array of knowledge and its focus on details of quality workmanship. Rest assured that this product has been thoroughly tested for optimal performance and reliability. Please note that this product is for OFF ROAD USE ONLY.



Fender Lining Removal

- 1) Unbolt driver's side front fender lining using a 10mm socket



Air Box Cover Removal

- 1) Unclip each fastener
- 2) Remove cover
- 3) Remove air filter



Air Box Removal

- 1) Detach Hose from Air Box
- 2) Detach Hose Connector




- 3) Detach harnesses by sliding rubber grommets up off the Air Box




- 4) Unscrew the two screws using a T20 Torx bit




5) Detach Snorkel Intake by pressing in the two tabs, and pulling off from Air Box

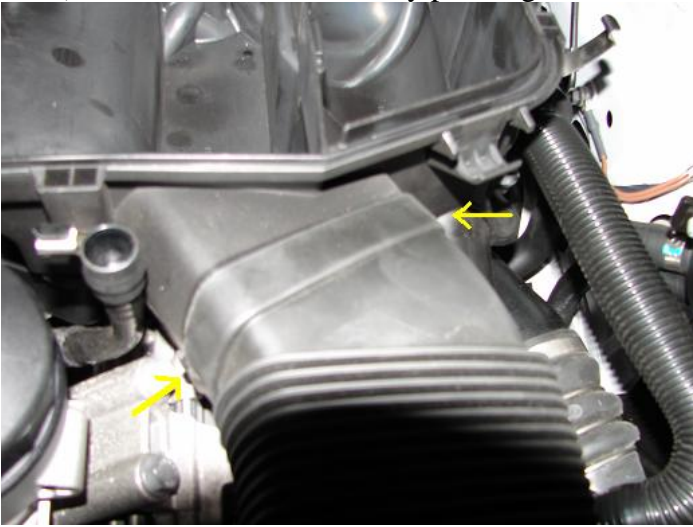

6) Detach Air Box from Turbocharger Intake Pipes by loosening clamps with a flathead screwdriver


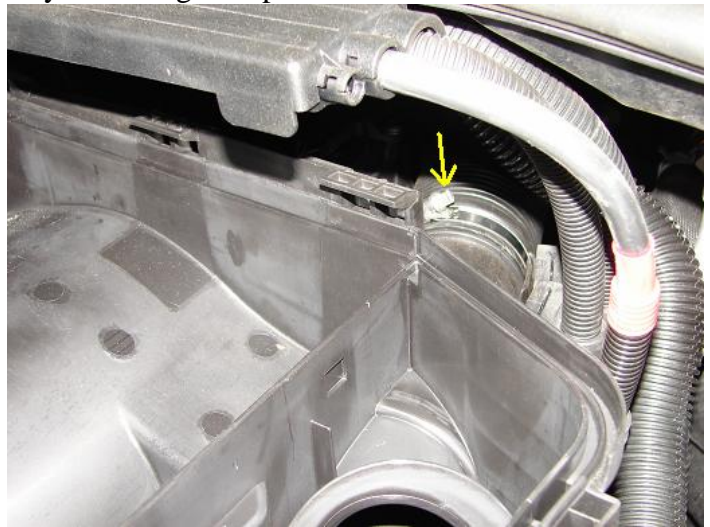


7) Carefully remove Air Box by pulling up off of rubber tabs. Start from front to back. The two back tabs are underneath the Airbox


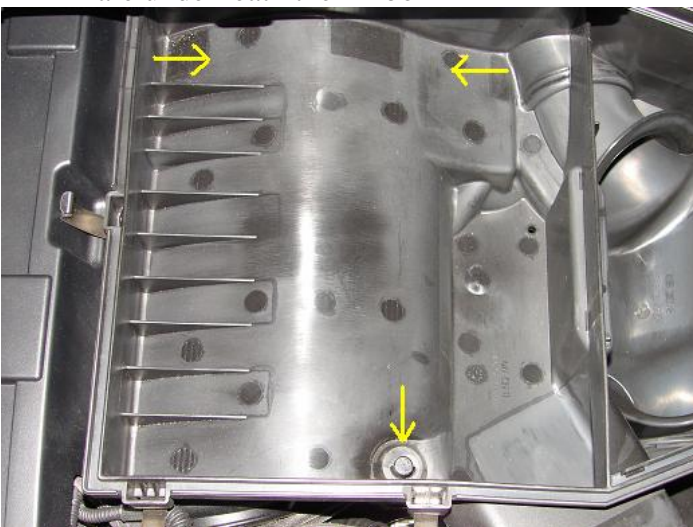


Power Steering Reservoir Relocation

- 1) Unbolt Power Steering Reservoir from bracket using a 10mm socket
- 2) Unbolt and remove Power Steering Reservoir Bracket using a 10mm socket.
- 3) Unbolt and remove brace using 16mm socket. (E92 Coupe Only)

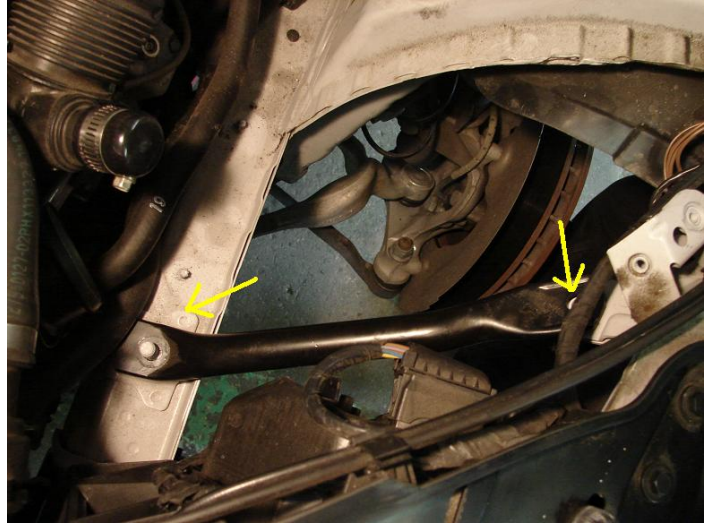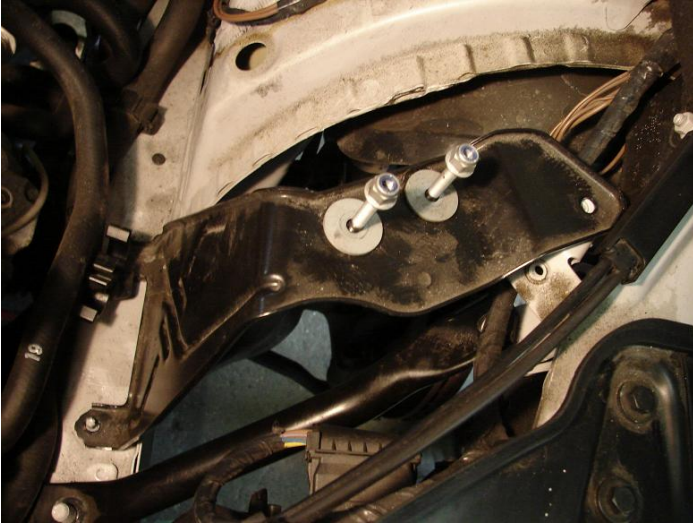

- 4) Install supplied Relocation Bracket onto Power Steering Reservoir
- 5) Install assembly as shown

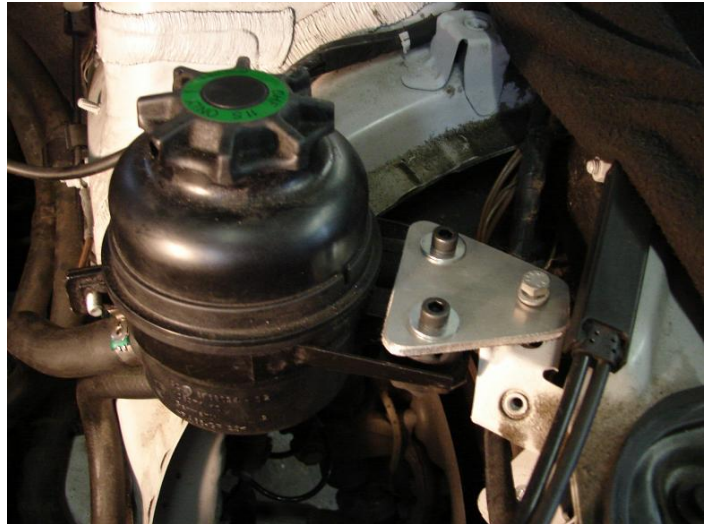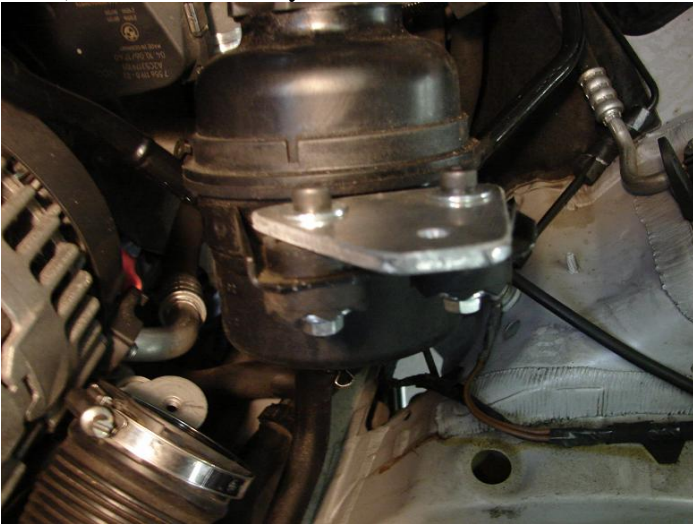

Cold Ram Air, or Cold Air? You decide. (E92 Coupe Only)

Please note that Ultimate Racing will not be held liable for any damages should your engine ingest any fluid(s) through the Cold Air Intake. Please drive responsibly.

Cold Ram Air

- 1) For Cold Ram Air, remove inside cover as shown




Cold Air

- 1) For Cold Air, do not remove inside cover and leave as is




Cold Air Intake Installation

- 1) Install Cold Air Intake (without filter) as shown
- 2) Tighten Turbocharger Intake Pipe clamps using a flat head screwdriver

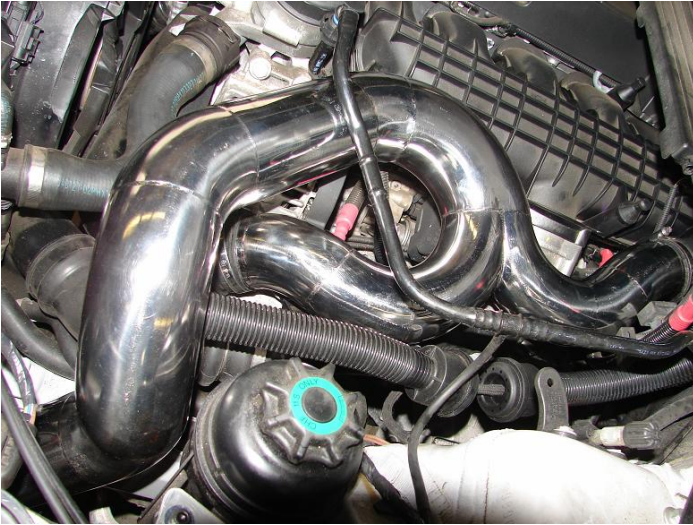

- 3) Install Air Filter and tighten clamp using a 10mm socket

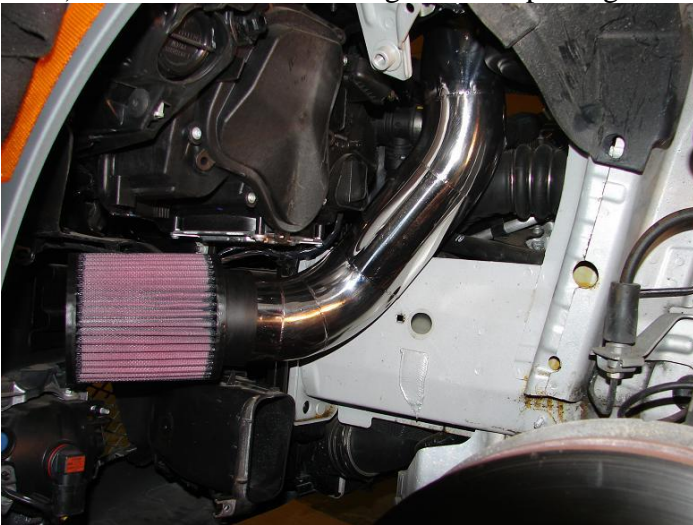

Finishing Up

- 1) Reattach Hose Connector
- 2) Reinstall Driver's Side Front Fender Lining



- 3) Double check installation

Installation Complete



Ultimate Racing
20 Cosentino Drive, Toronto, Ontario, M1P 3A2, Canada
Tel: (416) 292-6446 email: sales@ultimate-racing.com
www.ultimate-racing.com