



Important!

Please give copies to all your VW Technicians

Technical Bulletin

Subject: **Passenger Occupant Detection System (PODS) Fault**

Group: **69**

Number: **04-01**

Model(s): **New Beetle Convertible
Touareg**

**2004
2004**

Date: **Feb. 2, 2004**


Condition

After replacement of the PODS system, the passenger seat bolster or the Airbag Control Module, fault code 02511 014 - Seat Occupied Recognition Control Module Faulty - appears.

Service

After the replacement of one of the above described items the Seat Occupied Recognition Control Module serial number has to be transferred to the Airbag Control Module.

- Connect the VAS 5051/5052 Diagnostic tool.
- Switch ignition ON.
- From the Start-up screen, select "Vehicle self diagnosis".

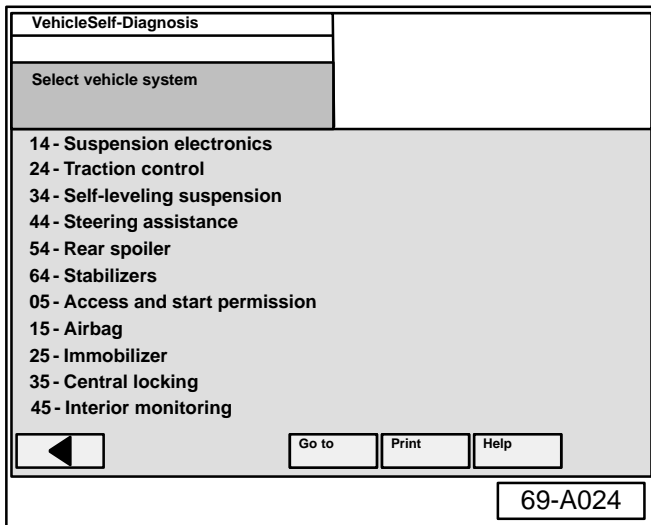

◀ - Select vehicle system "15-Airbag".



Important!

Please give copies to all your VW Technicians

Technical Bulletin

Vehicle Self-Diagnosis	15 - Airbag
Select diagnosis function	Airbag Part Number Airbag description & software level Coding XXXXX Dealership number XXXXX
Supported functions 04 - Basic settings 05 - Erase fault memory 06 - End output 07 - Code control unit Coding subbussystem 08 - Read Measuring Valve Block 10 - Adaption 11 - Coding II 16 - Access permission Challenge reading out Immob IV	
<input type="button" value="Go to"/> <input type="button" value="Print"/> <input type="button" value="Help"/>	
69-A025	

◀ – Select “16-Access Permission”.

Vehicle Self-Diagnosis	15 - Airbag															
16- Access permission	Airbag Part Number Airbag description & software level Coding XXXXX Dealership number XXXXX															
Enter code word max. input value = 99999																
<table border="1"> <tr><td colspan="3">XX</td></tr> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> <tr><td>C</td><td>0</td><td>Q</td></tr> </table>		XX			1	2	3	4	5	6	7	8	9	C	0	Q
XX																
1	2	3														
4	5	6														
7	8	9														
C	0	Q														
<input type="button" value="Go to"/> <input type="button" value="Print"/> <input type="button" value="Help"/>																
69-A026																

◀ – Enter code word:

- ◆ For New Beetle Convertible, enter 11063.
- ◆ For Touareg, enter 30475.

Vehicle Self-Diagnosis	15 - Airbag
16- Access permission	Airbag Part Number Airbag description & software level Coding XXXXX Dealership number XXXXX
Function performed successfully	
<input type="button" value="Go to"/> <input type="button" value="Print"/> <input type="button" value="Help"/>	
69-A027	

◀ ◆ If code has been entered correctly the following screen is displayed.

– Select back arrow ◀ on navigation bar.



Important!

Please give copies to all your VW Technicians

Technical Bulletin

Vehicle Self-Diagnosis	15 - Airbag
Select diagnosis function	Airbag Part Number Airbag description & software level Coding XXXXX Dealership number XXXXX
Supported functions	
04 - Basic settings	
05 - Erase fault memory	
06 - End output	
07 - Code control unit	
Coding subbussystem	
08 - Read Measuring Valve Block	
10 - Adaption	
11 - Coding II	
16 - Access permission	
Challenge reading out Immob IV	
<input type="button" value="Go to"/> <input type="button" value="Print"/> <input type="button" value="Help"/>	

69-A028

◀ – Select “04-Basic settings”.

Vehicle Self-Diagnosis	15 - Airbag															
04 - Basic settings	Airbag Part Number Airbag description & software level Coding XXXXX Dealership number XXXXX															
Enter display group																
max. input value = 254																
<table border="1"> <tr><td colspan="3">XX</td></tr> <tr><td>1</td><td>2</td><td>3</td></tr> <tr><td>4</td><td>5</td><td>6</td></tr> <tr><td>7</td><td>8</td><td>9</td></tr> <tr><td>C</td><td>0</td><td>Q</td></tr> </table>		XX			1	2	3	4	5	6	7	8	9	C	0	Q
XX																
1	2	3														
4	5	6														
7	8	9														
C	0	Q														
<input type="button" value="Go to"/> <input type="button" value="Print"/> <input type="button" value="Help"/>																

69-A029

◀ – Enter “01” on keypad to select display group 001.

Vehicle Self-Diagnosis	15 - Airbag
04 - Basic settings	Airbag Part Number Airbag description & software level Coding XXXXX Dealership number XXXXX
Measured values not in basic setting	
00 5T U 0	Display Group
Measured values in basic setting	
	1
<input type="button" value="Activating"/>	
<input type="button" value="Go to"/> <input type="button" value="Print"/> <input type="button" value="Help"/>	

69-A030

◀ – Click on the “Activating” button in order to transfer Seat Occupied Recognition Control Module serial number into the Airbag Control Module.



Important!

Please give copies to all your VW Technicians

Technical Bulletin

Vehicle Self-Diagnosis	15 - Airbag
04 - Basic settings	Airbag Part Number
	Airbag description & software level
	Coding XXXXX
	Dealership number XXXXX
Measured values not in basic setting	
	00
	5T
	U
	0
Measured values in basic setting	
	00
	5T
	U
	0
<input type="button" value="Go to"/> <input type="button" value="Print"/> <input type="button" value="Help"/>	
69-A031	

◀ ◆ If serial number has been transferred successfully you should see the following screen.

- Select back arrow ◀ on navigation bar to exit this screen.
- Erase any sporadic faults in the Airbag system.
- Interrogate the fault memory to ensure no Diagnostic Trouble Codes (DTCs) are present.