

Technical Bulletin



Condition

Ignition Key, Emergency Release Revision

In the event a customer contacts your dealership requesting assistance with ignition key emergency release, the following procedure describes proper steps for key removal.

94 06 22 Dec. 11, 2006 2010565 Supersedes T. B. Group 94 number 04-03 dated November 19, 2004 due to inclusion into ElsaWeb

Model(s)	Year	Eng. Code	Trans. Code	VIN Range From	VIN Range To
Touareg	2004	All	All	7L_4D000001	7L_4D080433
Phaeton	2004	All	All	3D_48000001	3D_48012170

Technical Background

Vehicle owner's manual omits "Apply parking brake" step from ignition key emergency release procedure.

Production Solution

No production change required.


Service

Vehicles built up to the following VINs:


Touareg	7L_4D080433
Phaeton	3D_48012170

Vehicles built after above VINs do not have this emergency release feature.

Technical Bulletin

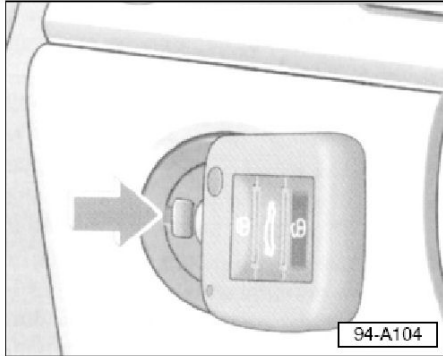

- Switch ignition OFF.
- Move transmission selector lever to “P” (Park).
- Fully engage parking brake.
- Remove cover -arrow- if equipped.

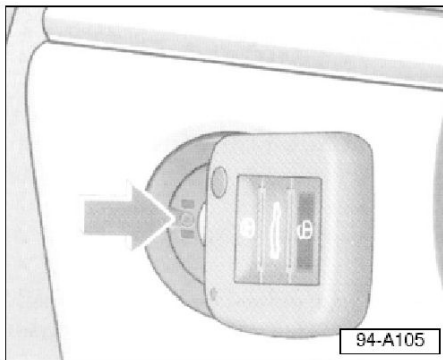

- Press emergency release button -arrow-using pen or similar tool.
- With emergency release button pressed down, turn ignition key counterclockwise and remove.

Warranty

Information only.

Required Parts and Tools

No Special Parts required. Always see ETKA for the latest part(s) information.

No Special Tools required.